



PE7216 / PE7324
PE8216 / PE8324

16 / 24-Outlet Metered eco PDU
User Manual

Compliance Statements

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Warning

Operation of this equipment in a residential environment could cause radio interference.

Achtung

Der Gebrauch dieses Geräts in Wohnumgebung kann Funkstörungen verursachen.



Note: The KJ and J model series do not meet or qualify for FCC or CE certification, as they are produced for countries outside the FCC's jurisdiction.

KCC Statement

유선 제품용 / A 급 기기 (업무용 방송 통신 기기)
이 기기는 업무용 (A 급) 전자파적합기기로서 판매자 또는 사용자는 이
점을 주의하시기 바라며, 가정 외의 지역에서 사용하는 것을 목적으로
합니다.

Industry Canada Statement

This Class A digital apparatus complies with Canadian ICES-003.

CAN ICES-003 (A) / NMB-003 (A)**VCCI Statement**

この装置は、クラスA機器です。この装置を住宅環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

VCCI – A**RoHS**

This product is RoHS compliant.

PE Device Safety Notice

- ◆ Set the maximum permissible breaker protection in the building circuitry to the current rating specified on the rating plate. Observe all national regulations and safety codes as well as deviations for breakers.
- ◆ Only connect the PE Device to a grounded power outlet or a grounded system!
- ◆ Make sure that the total current input of the connected systems does not exceed the current rating specified on the rating plate of the PE

User Information

Online Registration

Be sure to register your product at our online support center:

International	http://eservice.aten.com
---------------	---

Telephone Support

For telephone support, call this number:

International	886-2-8692-6959
China	86-400--810-0-810
Japan	81-3-5615-5811
Korea	82-2-467-6789
North America	1-888-999-ATEN ext 4988 1-949-428-1111

User Notice

All information, documentation, and specifications contained in this manual are subject to change without prior notification by the manufacturer. The manufacturer makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties as to merchantability or fitness for any particular purpose. Any of the manufacturer's software described in this manual is sold or licensed *as is*. Should the programs prove defective following their purchase, the buyer (and not the manufacturer, its distributor, or its dealer), assumes the entire cost of all necessary servicing, repair and any incidental or consequential damages resulting from any defect in the software.

The manufacturer of this system is not responsible for any radio and/or TV interference caused by unauthorized modifications to this device. It is the responsibility of the user to correct such interference.

The manufacturer is not responsible for any damage incurred in the operation of this system if the correct operational voltage setting was not selected prior to operation. PLEASE VERIFY THAT THE VOLTAGE SETTING IS CORRECT BEFORE USE.

Product Information

For information about all ATEN products and how they can help you connect without limits, visit ATEN on the Web or contact an ATEN Authorized Reseller. Visit ATEN on the Web for a list of locations and telephone numbers:

International	http://www.aten.com
North America	http://www.aten-usa.com

Package Contents

Check to make sure that all components are in working order. If you encounter any problem, please contact your dealer.

The eco PDU PE Series standard package consists of:

- 1 PE7216 / PE7324 / PE8216 / PE8324 Power Distribution Unit
- 1 power cord (PE7216 / PE8216 only)
- 1 mounting kit
- 1 user instructions

Contents

Compliance Statements ii	
PE Device Safety Notice	iii
User Information	iv
Online Registration	iv
Telephone Support	iv
User Notice	iv
Product Information.....	v
Package Contents.....	v
Contents	vi
About This Manual	ix
Conventions	x
Chapter 1.Introduction	
Overview.....	1
Comparison Chart	3
Features	4
Power Distribution	4
Remote Access.....	4
Operation	4
Management	5
Security.....	5
eco DC DCIM Management Web GUI*	5
Proactive Overload Protection (POP)	6
Requirements	7
Optional Accessories	8
Environment Sensors	8
Door Sensor	8
Cable Holders.....	8
Components	10
PE7216 / PE8216	10
PE7324 / PE8324	12
Port and LED Panel (All models)	14
Chapter 2.Hardware Setup	
Before You Begin.....	17
Rack Mount	17
PDU Placement	18
Installation	19
Installation Diagram	20
Securing the Cables	21
Securing the Sensors	22

Chapter 3. Basic Operation and First-Time Setup

Operation Methods	23
Browser	23
eco DC	23
SNMP	23
First-Time Setup	24
Network Configuration	25
Changing the Administrator Login	26
Moving On.....	26

Chapter 4. Logging In

Logging In.....	27
The eco PDU Main Page	28
Page Components	29

Chapter 5. Energy

Energy.....	31
Connections	31
Configuration	35

Chapter 6. User Management

Overview	39
Administrator Information	39
User Information	40

Chapter 7. Log

Log.....	41
The System Log Event List	42

Chapter 8. Setup

Device Management.....	43
Device Configuration	43
Event Notification	46
Security	50
SNMP & Telnet Settings	57

Chapter 9. PDU

PDU	59
Firmware File.....	59
Backup	62
Restore	62

Appendix

Safety Instructions	63
General	63
Rack Mounting	65

The eco PDU's Main Power Cord	65
Securing the Power Cables	65
Resetting the Circuit Breaker	66
Recovery Procedure:	66
Technical Support	67
International	67
North America	67
IP Address Determination	68
Specifications	70
PE7216B / PE8216B	71
PE7216G / PE8216G	73
PE7324B/J / PE8324B/J	75
PE7324G / PE8324G	77
PE8324G2 / PE8324G3	79
Administrator Login Failure	81
ATEN Warranty Policy	82

About This Manual

This manual is provided to help you get the most out of your eco PDU. It covers all aspects of the power distribution unit, including installation, configuration, and operation.

The eco PDU models covered in this manual include:

Model	
PE7216	20A/16A 16-Outlet Outlet-Metered eco PDU
PE7324	30A/32A 24-Outlet Outlet-Metered eco PDU
PE8216	20A/16A 16-Outlet Outlet-Metered & Switched eco PDU
PE8324	30A/32A 24-Outlet Outlet-Metered & Switched eco PDU

An overview of the information found in the manual is provided below.

Chapter 1, *Introduction*, introduces you to the unit/system. It presents purpose, features and benefits are presented, and its front and back panel components are described.

Chapter 2, *Hardware Setup*, provides step-by-step instructions for setting up your installation, and explains some basic operation procedures.

Chapter 3, *Basic Operation and First-Time Setup*, explains the procedures that the administrator employs to set up the eco PDU network environment, and change the default username and password.

Chapter 4, *Logging In*, describes how to log in to the eco PDU with an Internet browser, and explains the layout and components of the user interface.

Chapter 5, *Energy*, describes how to monitor and configure the eco PDU energy settings.

Chapter 6, *User Management*, describes how to configure the eco PDU user management such as username and password.

Chapter 7, *Log*, describes how to read and export log from the eco PDU.

Chapter 8, *Setup*, describes how to configure and manage the eco PDU as a whole.

Chapter 9, *PDU*, describes how to perform a firmware upgrade on the eco PDU, or back up and restore files.

Appendix, at the end of the manual provides technical and troubleshooting information.

Note:

- ◆ Read this manual thoroughly and follow the installation and operation procedures carefully to prevent any damage to the unit and/or connected devices.
 - ◆ The product may have been updated, with features and functions added, improved, or removed since the release of this manual. For an up-to-date user manual, visit <https://www.aten.com/global/en>.
-

Conventions

This manual uses the following conventions:

- | | |
|---|--|
| Monospaced | Indicates text that you should key in. |
| [] | Indicates keys you should press. For example, [Enter] means to press the Enter key. If keys need to be chorded, they appear together in the same bracket with a plus sign between them: [Ctrl+Alt]. |
| 1. | Numbered lists represent procedures with sequential steps. |
| ◆ | Bullet lists provide information, but do not involve sequential steps. |
| > | Indicates selecting consecutive options (such as on a menu or dialog box). For example, Start > Run means to open the <i>Start</i> menu, and then select <i>Run</i> . |
|  | Indicates critical information. |

Chapter 1

Introduction

Overview

ATEN PE7216 / PE7324 / PE8216 / PE8324 eco PDUs are intelligent PDUs that contain 16 or 24 AC power outlets, and are available in various IEC or NEMA socket configurations. PE8 series features ATEN's proactive overload protection, which automatically powers off outlets when a current overload occurs.

ATEN eco PDUs provide a secure, centralized, intelligent, power management (power on, off, cycle) for data center IT equipment (servers, storage systems, KVM switches, network devices, serial data devices, etc.), as well as the ability to monitor the center's health environment via sensors¹. The basic characteristics of each model are shown in the table on page 3.

ATEN eco PDUs offer remote power control combined with real-time power measurement — allowing you to control and monitor the power status of its powered devices via TCP/IP connection, either at the PDU device, bank, or outlet level, depending on the model, from anywhere².

The power status of each outlet can be set individually, allowing users to switch each device on/off. The eco PDU also offers comprehensive power analysis reports that can separate departments and/or locations, providing precise measurements of current, voltage, power, and watt-hour in a real-time display.

Installation and operation is fast and easy: simply plug the cables into their appropriate ports and users can operate via its intuitive browser-based configuration and management. Since the eco PDU firmware is upgradeable over the Internet, you can keep your device up to date with the latest functionality improvements, simply by downloading updates from our website as they become available.

ATEN eco PDU supports any 3rd-party v3 SNMP manager software and ATEN eco DC (Energy & DCIM management web GUI). eco DC provides you with an easy method for managing multiple devices, offering an intuitive and user-friendly graphical user interface that allows you to configure PDUs and monitor power status of all equipment connected.

With its advanced security features and ease of operation, the eco PDU is the most convenient, reliable, and cost-effective way to remotely manage

power access for multiple computer/server installation infrastructures and allocate power resources in the most efficient way.

- Note:** 1. Sensors are optional accessories. A sensor-enabled installation is required to generate a more complete energy-efficient data and chart. Higher sensor installation density is helpful to generate more accurate data. See *Optional Accessories*, page 8, for further information.
2. eco PDUs are primarily designed for access via an intranet; extra network security protection is suggested for Internet access usage.
3. Not all models support all features. See *Comparison Chart*, page 3, and *Specifications*, page 70, for full details.
-

Comparison Chart

Model	Inlet / Cord	Outlets		Metering Level	Outlet Switching
PE7216B	NEMA 6-20P	16	14 x IEC 60320 C13 + 2 x IEC 60320 C19	PDU / 1 x Bank / Outlet	No
PE8216B					Yes 16/16
PE7216G	IEC 60320 C20				No
PE8216G					Yes 16/16
PE7324B / J	NEMA L6-30P	24	21 x IEC 60320 C13 + 3 x IEC 60320 C19	PDU / 2 x Bank / Outlet	No
PE8324B / J					Yes 24/24
PE7324G	IEC 60309 32A				No
PE8324G					Yes 24/24
PE8324G2					6 x IEC 60320 C13 + 18 x IEC 60320 C19
PE8324G3					18 x IEC 60320 C13 + 6 x IEC 60320 C19

Note: For the complete specifications of individual models, including bank-by-bank outlet details, please reference *Specifications*, page 70.

Features

Power Distribution

- ◆ Space saving 0U rack mount design with rear mounting
- ◆ Various IEC outlet models
- ◆ 2 digit 7-segment front panel LED showing PDU / Phase / Bank / Outlet ID
- ◆ 3 digit 7-segment front panel LED showing Current / Voltage / Power Dissipation, IP address, and readings from up to 4 environment sensors
- ◆ Safe shutdown support
- ◆ Separate power for the unit's own power and its power outlets — keeping the user interface accessible even when an overload condition trips the devices' circuit breaker
- ◆ Proactive overload protection (POP) (PE8216/PE8324 only) — automatically powering off outlets when a current overload occurs (see *Proactive Overload Protection (POP)*, page 6)

Remote Access

- ◆ Remote power control via TCP/IP and a built-in 10/100 Ethernet port
- ◆ Network Protocols: TCP/IP, UDP, HTTP, HTTPS, SSL, SMTP, ARP, DHCP, NTP, DNS, Auto Sense, Telnet, Ping, SNMP v1, v2 & v3
- ◆ Remote users can monitor outlet status via web pages on web browsers
- ◆ eco PDU Energy & DCIM Management Web GUI — eco DC
- ◆ Supports SNMP Manager v3

Operation

- ◆ Local and remote power outlet control (on, off, power cycle) by individual outlets (PE8216/PE8324 only)
- ◆ Supports multiple power control methods — Wake on LAN, System after AC Back, Kill the Power
- ◆ Power-on sequencing — setting the power on sequence and delaying time for each outlet to allow equipment to be powered on in the defined order
- ◆ Easy setup and operation via a browser-based user interface
- ◆ Multiple browsers support (IE, Firefox, Chrome, Safari)
- ◆ RTC support to keep the timer running during times without power

- ◆ Up to 8 user accounts and 1 administrator account

Management

- ◆ Power metering and monitoring at the PDU / Bank / Outlet level
- ◆ LED indicators for current, voltage, power dissipation at the PDU / Bank / Outlet levels
- ◆ Real-time aggregate current, voltage, power, and power dissipation displayed in a browser-based UI for monitoring at the PDU, bank and outlet level (PE7216/PE8216 offers 1 bank metering; PE7324/PE8324 offers 2 bank metering)
- ◆ Alert notification for selected events (on, off, recycle, failure, exceeding threshold settings, etc.), via blinking LEDs (locally), SMTP, and SNMP trap notification
- ◆ Supports Management Information Base (MIB) files for SNMP
- ◆ Environment monitoring — supports external temperature / humidity / differential pressure sensors for rack environment monitoring
- ◆ Door Sensor support — allowing monitoring of rack mount enclosure door access and notifying users when a door is opened.
- ◆ Current and voltage threshold setting
- ◆ Naming support for outlets
- ◆ User outlet access assignment on an outlet-by-outlet basis
- ◆ Event logging and Syslog support
- ◆ Upgradeable firmware
- ◆ Multiple languages support — English, Traditional Chinese, Simplified Chinese, Japanese, German, Italian, Spanish, French, Russian, Korean, Portuguese

Security

- ◆ Two-level password security
- ◆ Strong security features include strong password protection and advanced encryption technologies — TLS 1.0
- ◆ Remote authentication support: RADIUS
- ◆ IP / MAC filter

eco DC DCIM Management Web GUI*

- ◆ Automatic discovery of all PE devices within the LAN

- ◆ Remote real-time power measurement and monitoring
- ◆ Real-time environment sensor monitoring
- ◆ Plotting/monitoring of all PE devices
- ◆ Exceed threshold alert through SMTP and System log
- ◆ Power Analysis report

Note: eco DC is designed to work with ATEN PDUs and is bundled with all PE series packages.

Proactive Overload Protection (POP)

The PE8216 and PE8324 models feature ATEN's exclusive Proactive Overload Protection (POP) technology. Effective on all non-critical outlets, this added safety feature automatically powers off outlets when a current overload occurs.

POP mode is engaged, powering off the outlets, when the current exceeds the maximum threshold value set. The LED display shows POP and a beeper sounds. Press any button for two seconds to clear POP mode and power the outlets back on.

Requirements

- ◆ Browsers accessing the eco PDU must support TLS 1.0.
- ◆ For cold booting of attached computers, the computer's BIOS must support *Wake on LAN* or *System after AC Back*.
- ◆ For Safe Shutdown:
 - ◆ The computer must be running Windows (2000 or above) or Linux.
 - ◆ The *Safe Shutdown* program — PMonitor — must be installed and running on the computer (available by download from our website).

Note: Safe shutdown program PMonitor can be downloaded from the *Support and Download* section of the product web page, as shown below

Software & Drivers ▾

OS	Description	Ver.	Release Date	File Name
Other				
	MIB File	v1.1.115	2015-05-05	PE_MIB_File_v1.1.115.zip
	PE MIB File	v1.1.112	2014-06-19	PE8_MIB_File_v1.1.112.tar
	PE MIB File	v1.1.109	2013-09-06	PE8_MIB_File_v1.1.109.tar
	IP installer	v1.4.132	2012-02-10	IPInstaller-ALTUSEN_v1.4.132.zip
Linux	PMonitor	v1.1	2012-02-10	PowerMonitor_v1.1.zip
Windows	PMonitor	v1.0.081	2012-02-10	PMonitorSrv_v1.0.081.zip
	PE MIB File	v1.0.063	2012-02-10	PE8_MIB_File_v1.0.063.zip

Optional Accessories

Environment Sensors

For complete energy management of an instrumented data center with the eco PDU and eco DC, you should install 4 sensors for each of the racks in your data center in order to generate a complete energy-efficient data chart. 8/16-port models have 4 sensor ports. Higher sensor installation density is helpful to generate more accurate data.

To get the most complete eco DC data, the recommended 4-sensor setup is shown in the table, below:

Port	Location	Part Number	Sensor
Sensor 1	Intake	EA1140 or EA1240	Temperature or Temperature / Humidity
Sensor 2	Intake		
Sensor 3	Exhaust		
Sensor 4	Exhaust	EA1340	Differential Pressure
	or Floor		

Door Sensor

All models in the PE7xxx/PE8xxx range feature a 4-pin dry contact port for door sensors in monitoring rack mount enclosure door access, and notifying users when a door is opened.

For a list of compatible door sensors, please refer to the *Compatible Accessories* section on the product web page. Please contact your ATEN dealer for inquiry and purchase.

Sensor Management

Sensors can be managed via the eco PDU's built-in graphical user interface (GUI) or with the ATEN eco DC that can be downloaded from the ATEN website.


Cable Holders

Cable holders are optional accessories. For added safety, use ATEN Lok-U-Plug cable holders to secure the cables from your attached devices in place on the eco PDU. Only the ATEN Lok-U-Plug cable holders that have been specifically designed to work with the eco PDU can be used. Using any other

kinds of cable securing device could potentially result in irreversible damage or harm to the device or users. For a list of compatible cable holders, please refer to the Compatible Products section on the product web page.

Components

PE7216 / PE8216

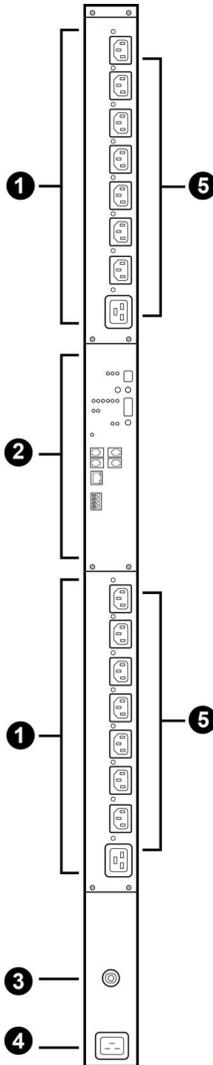


Note: The PE7216 / PE8216 unit components are identical except for the outlet LEDs — the PE7216 has none while the PE8216 has 16, as shown by number 5 above.

No.	Item	Description
1	power outlets*	16 in total (14 x IEC 60320 C13 + 2 x IEC 60320 C19) Bank 1-1: Outlet 1–8: 7 C13; 1 x C19 Bank 1-2: Outlet 9–16: 7 x C13; 1 x C19
2	port and LED panel	The Port and LED panel contains: <ul style="list-style-type: none"> ◆ Readout Section and LEDs ◆ Environmental Sensor Ports ◆ LAN Port ◆ Door Sensor Port ◆ Reset Switch Full details of this section are provided on page 14.
3	circuit breaker pushbutton	As a safety measure, if there is an overcurrent situation in regards to the device's power, the circuit breakers will trip. Press the button to recover normal operation. Warning: See <i>Resetting the Circuit Breaker</i> , page 66 for important information about resetting a tripped circuit breaker.
4	power inlet	The power cord that connects the unit to an AC power source plugs into this socket. <ul style="list-style-type: none"> ◆ B models connect to a NEMA 6-20P source ◆ G models connect to an IEC 60320 C20 source
5	outlet status LEDs	PE8216 (x 16) only. These LEDs indicate outlet status. Lights orange for powered on. Off for powered off.

Note: Holes for ATEN Lok-U-Plug cable holders are located around the outlets. See *Securing the Cables*, page 21, for further information.


PE7324 / PE8324

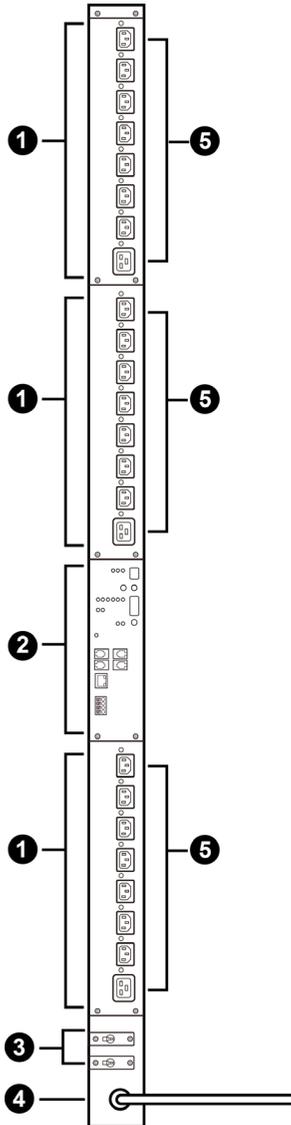

Note: The PE7324 / PE8324 unit components are identical except for the outlet LEDs — the PE7324 has none while the PE8324 has 24, as shown by number 5 above.

No.	Item	Description
1	power outlets*	24 in total, see page 3 for details.
2	port and LED panel	<p>The Port and LED panel contains:</p> <ul style="list-style-type: none"> ◆ Readout Section and LEDs ◆ Sensor Ports ◆ LAN Port ◆ Door Sensor Port ◆ Reset Switch <p>Full details of this section are provided on page 14.</p>
3	circuit breakers	<p>As a safety measure, if there is an overcurrent situation in regards to the device's power, the circuit breakers will trip. Reset the circuit breaker to recover normal operation.</p> <p>Warning: See <i>Resetting the Circuit Breaker</i>, page 66 for important information about resetting a tripped circuit breaker.</p>
4	power cord	<p>Plug the cord into an AC power source.</p> <ul style="list-style-type: none"> ◆ B models connect to a NEMA L6-30P source ◆ G models connect to an IEC 60309 32A source
5	outlet status LEDs	<p>PE8324 (x 24) only.</p> <p>These LEDs indicate outlet status.</p> <p>Lights orange for powered on.</p> <p>Off for powered off.</p>

Port and LED Panel (All models)

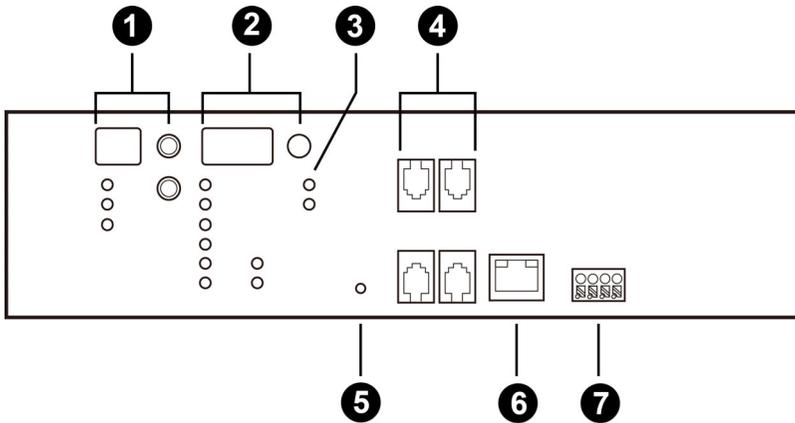

No.	Item	Description
1	ID section	<ul style="list-style-type: none"> ◆ The ID of the selected PDU / Phase / Bank / Outlet appears in the LED display window. ◆ When PDU/Phase LED is lit, the LED display window displays P1. ◆ When Bank LED is lit, use the Up and Down buttons to move forward or backward through the following sequence: 01 > 02 (Bank 1 > Bank 2) ◆ When the Outlet LED is lit, use the Up and Down buttons to move forward or backward through the outlets: 01 > 02 > 03 > ... 01 (Outlet 1 > Outlet 2 > Outlet 3 > ... Outlet 1)
2	readout section	<ul style="list-style-type: none"> ◆ When PDU / Phase / Bank / Outlet is selected, readouts for its current, voltage, power, and IP address appear in the display window. ◆ Press the button next to the LED display window to cycle the selection between the items; the LEDs next to the items indicate which one is currently displayed. ◆ When a sensor is selected, the display displays temperature / humidity / differential pressure according to the sensor type
3	status LEDs	<ul style="list-style-type: none"> ◆ Power: Lights when the unit is powered on and ready to operate. ◆ Door sensor: Lights red when the door is open. See <i>Door Sensor</i>, page 8, for details.

No.	Item	Description
4	sensor ports	External sensors plug into these four RJ-11 ports. See <i>Environment Sensors</i> , page 8, and <i>Securing the Sensors</i> , page 22, for further information.
5	reset button	This button is recessed and must be pushed with a thin object, such as the end of a paper clip. <ul style="list-style-type: none">◆ Press and release to reboot the device.◆ Press and hold for more than three seconds to reset the eco PDU back to its factory default settings.
6	LAN port	The cable that connects the unit to the Internet, LAN, or WAN plugs in here.
7	door sensor	This 4-pin dry contact port is for a door sensor — allowing the monitoring of rack mount enclosure door access, and notifying users when a door is opened. See <i>Door Sensor</i> , page 8, for details. Note: Supports up to two dry contact sensors on the PE8216 and PE8324.

This Page Intentionally Left Blank

Chapter 2

Hardware Setup


Before You Begin



1. Important safety information regarding the placement of this device is provided on page 63. Please review it before proceeding.
2. Make sure that power to all the devices you will be connecting have been turned off. You must unplug the power cords of any computers that have the Keyboard Power On function.
3. See *Resetting the Circuit Breaker*, page 66 for important information about resetting a tripped circuit breaker.


Rack Mount

The eco PDU can be mounted in a 0U configuration on the side of a rack. To mount the device onto a rack, use the mounting brackets provided. The brackets can be attached either near the top and bottom of the back panel, or to the top and bottom ends of the device, as shown in the diagram below:

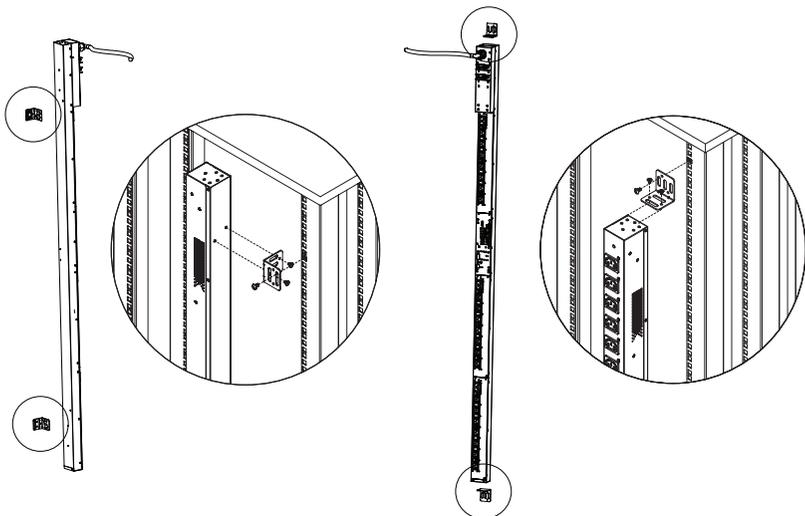

PDU Placement

For safety reasons, the eco PDU shall NOT be installed with the power sockets facing up or down, and thus should only be installed with the power sockets facing out from a vertical position, as shown below:

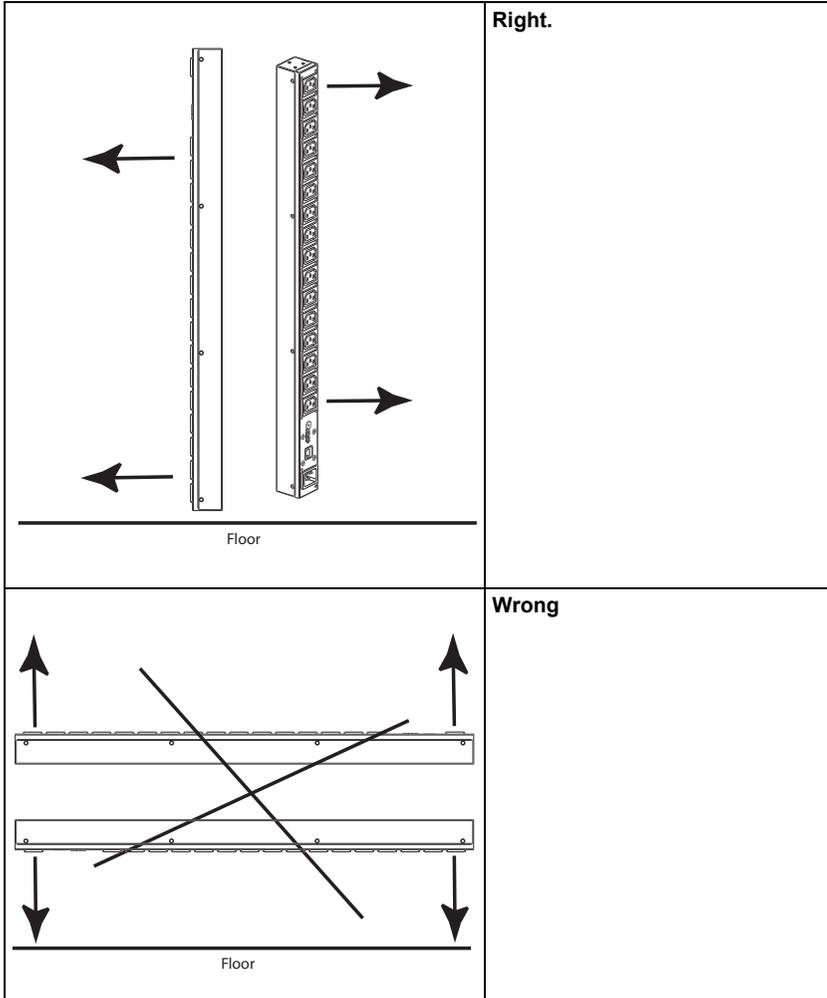

Note: The eco PDU models shown in the diagrams are for rack mount reference purposes only.

Installation

To set up your installation, refer to the installation diagram on the next page (the numbers in the diagram correspond to the numbered steps), and do the following:

1. Ensure that the eco PDU unit is properly grounded.

Note: Do not omit this step. Proper grounding helps to prevent damage to the unit from surges of static or electricity.

2. For each device you want to connect, use its power cable to connect the device's AC socket to any available outlet on the eco PDU. Use ATEN Lok-U-Plug cable holders to secure them.

Note: See *Securing the Cables*, page 21, for details.

3. Plug the Ethernet cable that connects the eco PDU to the LAN into the eco PDU's LAN port.
4. (Optional) If you are using environmental sensors in your eco PDU installation, connect up to four to the RJ-11 sensor ports on the unit's front panel.

Note: See *Optional Accessories*, page 8, and the installation diagrams later in this chapter for further information.


5. (Optional) If you are using a door sensor in your eco PDU installation, connect it to the 4-pin dry sensor port on the unit's front panel.

Note: See *Door Sensor*, page 8, for further information.

6. Depending on your model, connect the eco PDU's built-in power cord to an AC power source, or use the power cord provided to connect the eco PDU's power socket to an AC power source.


Once you have finished these installation steps, you can turn on the eco PDU and the connected devices.

Installation Diagram

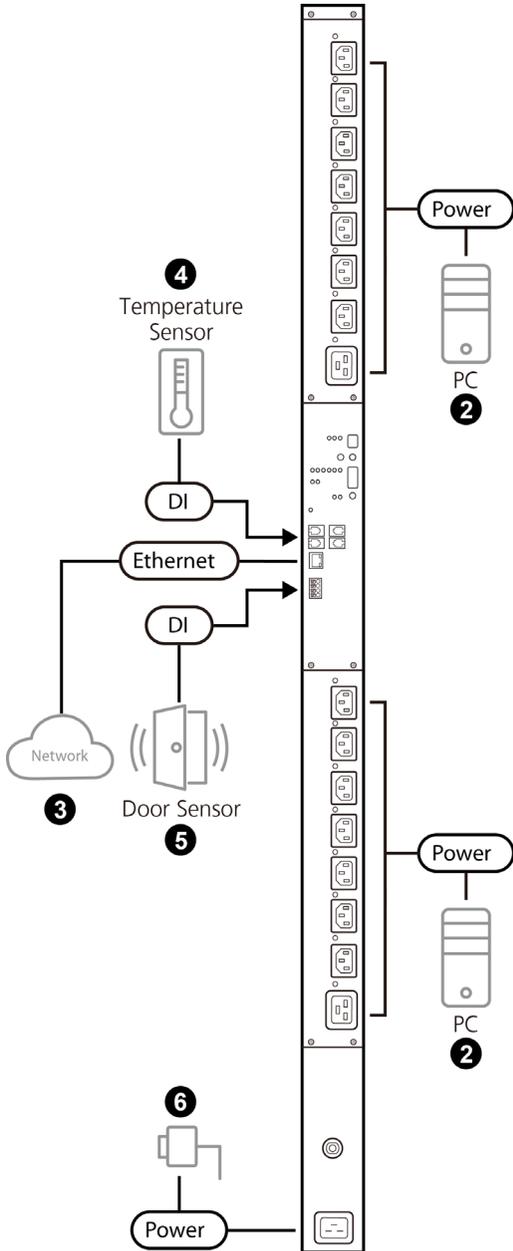

Securing the Cables


For added safety, use ATEN Lok-U-Plug cable holders to secure the cables of your powered devices in place on the eco PDU. Secure the cable holders using the specially designed holes around the individual power outlets, as shown below:

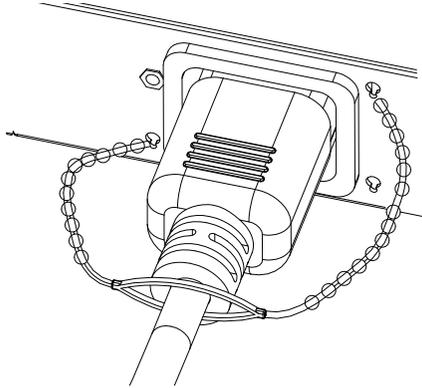

-
- Note:** 1. Cable holders are an optional accessory. See *Cable Holders*, page 8.
2. Only the ATEN Lok-U-Plug cable holders that have been specifically designed to work with the eco PDU can be used. Using any other kinds of cable securing device could potentially result in irreversible damage or harm to the device or users.
-

Securing the Sensors

Connect the sensors to the eco PDU's front panel sensor ports and secure them using sensor mounts, tie wraps, and adhesive cable tie holders. If you use a tie wrap to secure the sensor, tighten the tie wrap over the recessed channel on the sensor, as shown in the following diagram:

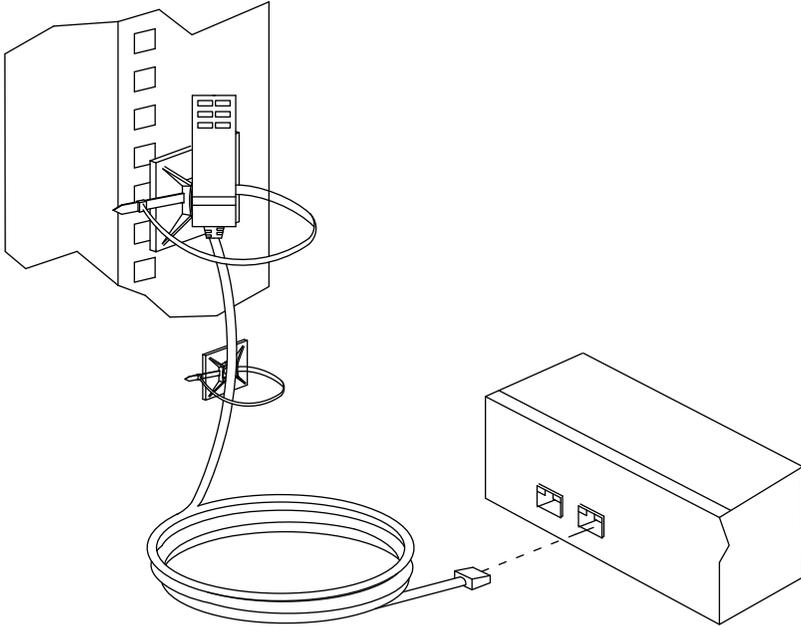

-
- Note:** 1. The sensors shown in the above diagram are for reference purposes only. The sensors for the eco PDU may look slightly different.
2. Depending on the model and type of sensor, sensor mounts, tie wraps, and adhesive cable tie holders may or may not be provided in the package.
-

Chapter 3

Basic Operation and First-Time Setup

Operation Methods

ATEN eco PDU models provide three methods to be accessed and managed: Browser, eco DC (Energy & DCIM management web GUI), and SNMP.

Note: The following sections of this chapter contain information concerning Browser operation. For eco DC operation, please refer to the eco DC user manual. The eco DC and user manual can be downloaded from the ATEN website.

Browser

ATEN eco PDUs can be accessed and controlled via any supported Internet browser from any platform. See *First-Time Setup*, page 24, and the following sections in this chapter, for full details.

eco DC

All eco PDUs support eco DC (Energy & DCIM management web GUI). eco DC provides you with an easy method for managing multiple devices, offering an intuitive and user-friendly graphical user interface that allows you to configure PDUs and monitor power status of all equipment connected. To install the software, please visit the product web page, and then download the installer from the Support and Downloads tab.

SNMP

eco PDUs support any 3rd party V1, V2 & V3 SNMP Manager Software. To install the software, please visit the product web page, and then download the installer from the Support and Downloads tab.

First-Time Setup

Once the eco PDU installation and connections have been completed, the administrator shall start configuring its network parameters, including changing the default administrator login settings and adding users.

The easiest way to accomplish this is to log in to it with a browser using a PC within the same LAN.

- Note:**
1. Since this is the first time you are logging in, use the default username and password *administrator* and *password*. For security purposes, users should change the login credentials to something unique after logging in (see *Changing the Administrator Login*, page 26).
 2. For remote methods of getting logged into the network, see *IP Address Determination*, page 68.

After you successfully log in, the eco PDU Energy/Connections page appears:

The screenshot shows the NAGeOffice PE324A web interface. The top navigation bar includes 'Energy', 'User', 'Log', 'Setup', and 'PDU'. The main content area is titled 'Connections | Configuration' and features a sidebar with a tree view of connections (011-024). The main display is divided into two sections: 'PDU Status' and 'Bank Status'.

PDU Status Table:

PDU Name	Measurement	Min Threshold	Max Threshold	PDU Status
PE324A	Aggregate current	0.00 A		<input type="checkbox"/> ON <input type="checkbox"/> OFF Reboot
	Voltage	0.00 V		
	Power	0.0000 W		
	Aggregate power dissipation	0.0000 KWH		
	Power factor	0.00		
	Voltage frequency	0.00 HZ		
Sensor 1	Temperature	N/A		
	Humidity	N/A		
	Pressure	N/A		
Sensor 2	Temperature	N/A		
	Humidity	N/A		
	Pressure	N/A		

Bank Status Table:

Bank	Bank Name	Measurement	Min Threshold	Max Threshold	Bank Status
011		Current	0.00 A		<input type="checkbox"/> ON <input type="checkbox"/> OFF Reboot
		Voltage	0.00 V		
		Power	0.0000 W		
		Power Dissipation	0.0000 KWH		
		Breaker	ON		
		Power factor	0.00		
		Current	0.00 A		


© Copyright 2012 ATEN® International Co., Ltd.

Note: Operation details are discussed in the next chapter. For further setup information, continue with this chapter

Network Configuration

To set up the network, do the following:

3. Click the **Setup**. The **Device Configuration** page, similar to the one below, appears.

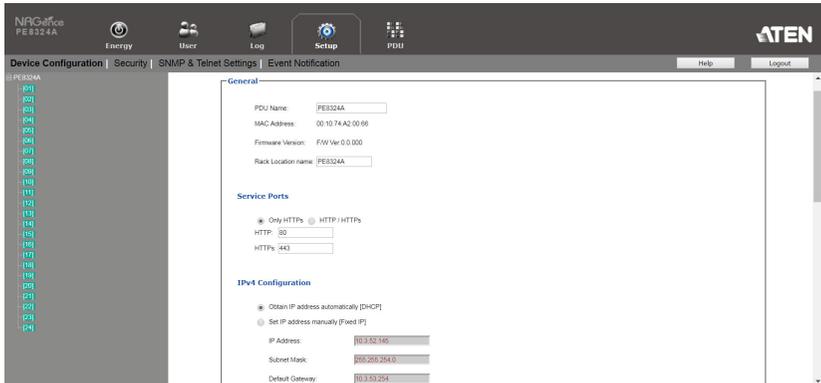

4. Fill in the fields according to the information provided under *Device Configuration*, page 43.

Changing the Administrator Login

To change the default administrator username and password, do the following:

1. Click **User**.

Once users have been added to the system, the Accounts page displays a detailed list of users — with more information about them in the large central panel:

Administrator information

Administrator:

Name: Password:

User information

Management	Name	Password	Outlet																									
			All	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
Enable ▾	aaa	***	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗
Enable ▾	222	***	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗
Enable ▾	x	*	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗
Enable ▾	gg	**	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗
Enable ▾	678	***	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗
Enable ▾	qwer	****	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗
Enable ▾	1234	****	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗
Enable ▾	uu	**	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗

- In the **Administrator Information** section at the top, reset the name and password fields to something unique, then click **Save** (at the bottom of the page.)

Note: If you forget the administrator's name or password, short the mainboard jumper to restore the default administrator account, see *Administrator Login Failure*, page 81, in the Appendix for full details.

Moving On

After setting up the network and changing the default administrator username and password, you can proceed to other administration activities, including adding users, which is covered in the next chapter.

Chapter 4

Logging In

Logging In

The eco PDU can be accessed via a supported Internet browser from any platform.

Note: Browsers must support TLS 1.0.

To access the eco PDU do the following:

1. Open your browser and specify the IP address of the eco PDU you want to access in the browser's URL location bar.

Note: You can get the IP address from the eco PDU administrator, or see *IP Address Determination*, page 68, for information about setting it up yourself.

2. If a security alert dialog box appears, accept the certificate — it can be trusted. The Login page appears:



PE8324 Please Login

Username:

Password:

Language:


Login Reset

- www.ATEN.com -

3. Provide a valid **Username** and **Password** (set by the eco PDU administrator).
4. Select your preferred **Language** from the drop-down menu.
5. Click **Login** to bring up the browser main page.

The eco PDU Main Page

After you have successfully logged in, the eco PDU main page comes up with the Energy *Connections* page displayed:

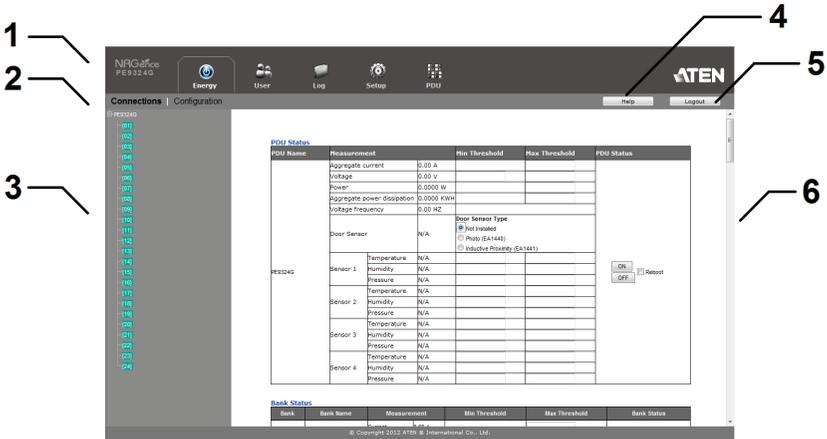

Note: The screen depicts an administrator’s page. Depending on the type of user logged in and its permissions, and your PE model, not all of these elements may appear.

Page Components

The web page screen components are described in the table below:

No.	Item	Description
1	Tab Bar	The tab bar contains the eco PDU's main operation categories. The items that appear in the tab bar are determined by the user's type, and the setting permissions that were selected when the user's account was created.
2	Menu Bar	The menu bar contains operational subcategories within the item selected on the tab bar. The items that appear in the menu bar are determined by the user's type, and the setting permissions that were selected when the user's account was created.
3	Sidebar	The Sidebar provides a tree view listing of outlets that relate to the various tab bar and menu bar selections.
4	Help	Connects to the online help section on the ATEN website for the device's configuration and operation.
5	Logout	Click this button to log out of your eco PDU session.
6	Interactive Display Panel	This is your main work area. The screens that appear reflect your menu choices and Sidebar node selection.

The Energy page has two tabs: *Connections* and *Configuration*, as described in the chapters that follow.

This Page Intentionally Left Blank

Energy

Connections

When you log in to the eco PDU, the interface opens with its default selection of *Energy > Connections*, with the **PDU Status**, **Bank Status**, and **Outlet Status** sections displayed in the main panel.

The screenshot shows the NRCoffice PES24G ATEN PDU web interface. The main panel displays the 'PDU Status' section for the device 'PE924G'. The interface includes a navigation menu on the left with numbered links (011-248), a top navigation bar with 'Energy', 'User', 'Log', 'Setup', and 'PDU' tabs, and a right-hand side with 'Help' and 'Logout' buttons. The 'PDU Status' table is as follows:

PDU Name	Measurement	Min Threshold	Max Threshold	PDU Status	
PE924G	Aggregate current	0.00 A			
	Voltage	0.00 V			
	Power	0.0000 W			
	Aggregate power dissipation	0.0000 KWH			
	Voltage frequency	0.00 HZ			
	Door Sensor	N/A		Door Sensor Type <input checked="" type="radio"/> Not Installed <input type="radio"/> Photo (EA1440) <input type="radio"/> Inductive Proximity (EA1441)	
	Sensor 1	Temperature Humidity Pressure	N/A N/A N/A		ON <input type="checkbox"/> OFF <input type="checkbox"/> Reboot
	Sensor 2	Temperature Humidity Pressure	N/A N/A N/A		
	Sensor 3	Temperature Humidity Pressure	N/A N/A N/A		
	Sensor 4	Temperature Humidity Pressure	N/A N/A N/A		

Below the PDU Status table is the 'Bank Status' section, which is currently empty. The footer of the interface contains the copyright notice: © Copyright 2012 Atten @ International Co., Ltd.

Note: Only enabled eco PDU models will display the Bank Status and/or Outlet Status submenus.

PDU Status

All eco PDU models support PDU device level monitoring. The **PDU Status** section allows you to set up a power management configuration for the PDU device as a whole:

PDU Status

PDU Name	Measurement	Min Threshold	Max Threshold	PDU Status	
PE8324G	Aggregate current	0.00 A			
	Voltage	0.00 V			
	Power	0.0000 W			
	Aggregate power dissipation	0.0000 KWH			
	Voltage frequency	0.00 HZ			
	Door Sensor	N/A	Door Sensor Type <input checked="" type="radio"/> Not installed <input type="radio"/> Photo (EA1440) <input type="radio"/> Inductive Proximity (EA1441)		
	Sensor 1	Temperature	N/A		
		Humidity	N/A		
		Pressure	N/A		
	Sensor 2	Temperature	N/A		
		Humidity	N/A		
		Pressure	N/A		
	Sensor 3	Temperature	N/A		
		Humidity	N/A		
		Pressure	N/A		
	Sensor 4	Temperature	N/A		
Humidity		N/A			

ON OFF Reboot

■ PDU Threshold Settings

These fields are used to set the maximum, minimum, and fluctuation threshold settings for the Aggregate Current, Voltage, Power, and Aggregate Power Dissipation. If any of them falls below the minimum setting or exceeds the maximum setting, an alarm is triggered.

- ◆ **Voltage Frequency** is displayed here in Hz.
- ◆ **On / Off / Reboot**

You can manually turn the device on or off from this page by clicking the radio buttons. To Reboot the device, enable the *Reboot* checkbox and click **Save** (located at the bottom of the page).

◆ Door Sensor

This section allows you to select the type of door sensor that is being used in the installation. See *Door Sensor*, page 8, for further information.

Note: Supports up to two dry contact sensors on the PE8216 and PE8324.

◆ Sensor 1–4

If you have sensors installed in your installation, use these fields to set the maximum, minimum, and fluctuation threshold settings for Temperature, Humidity, and/or Pressure.

Note: Sensors are optional accessories. Check with your dealer for details.

Bank Status

All eco PDU models support Bank level monitoring. The **Bank Status** section allows you to set up a power management configuration for each of the individual banks:

Bank Status

Bank	Bank Name	Measurement	Min Threshold	Max Threshold	Bank Status	
[01]		Current	0.00 A	<input type="text"/>	<input type="text"/>	<input type="button" value="ON"/> <input type="button" value="OFF"/> <input type="checkbox"/> Reboot
		Voltage	0.00 V	<input type="text"/>	<input type="text"/>	
		Power	0.0000 W	<input type="text"/>	<input type="text"/>	
		Power Dissipation	0.0000 KWH	<input type="text"/>	<input type="text"/>	
		Breaker	ON	<input type="text"/>	<input type="text"/>	
[02]		Current	0.00 A	<input type="text"/>	<input type="text"/>	<input type="button" value="ON"/> <input type="button" value="OFF"/> <input type="checkbox"/> Reboot
		Voltage	0.00 V	<input type="text"/>	<input type="text"/>	
		Power	0.0000 W	<input type="text"/>	<input type="text"/>	
		Power Dissipation	0.0000 KWH	<input type="text"/>	<input type="text"/>	
		Breaker	ON	<input type="text"/>	<input type="text"/>	

■ Threshold Settings

These fields are used to set the maximum, minimum, and fluctuation threshold settings for the Aggregate Current, Voltage, Power, and Power Dissipation. If any of them falls below the minimum setting or exceeds the maximum setting, an alarm is triggered.

- ◆ **Breaker** status (ON / OFF) displays here.

Outlet Status

If your eco PDU models supports outlet level power management, threshold settings and manual on/off/reboot switching can be performed on this page.

Outlet Status						
Outlet	Outlet Name	Measurement	Min Threshold	Max Threshold	Outlet Status	
[01]		Current	0.00 A	<input type="text"/>	<input type="text"/>	
		Voltage	0.00 V	<input type="text"/>	<input type="text"/>	
		Power	0.0000 W	<input type="text"/>	<input type="text"/>	ON <input type="radio"/> OFF <input type="radio"/> <input type="checkbox"/> Reboot
		Power Dissipation	0.0000 KWH	<input type="text"/>	<input type="text"/>	
		Power factor	0.00	<input type="text"/>	<input type="text"/>	
[02]		Current	0.00 A	<input type="text"/>	<input type="text"/>	
		Voltage	0.00 V	<input type="text"/>	<input type="text"/>	
		Power	0.0000 W	<input type="text"/>	<input type="text"/>	ON <input type="radio"/> OFF <input type="radio"/> <input type="checkbox"/> Reboot
		Power Dissipation	0.0000 KWH	<input type="text"/>	<input type="text"/>	
		Power factor	0.00	<input type="text"/>	<input type="text"/>	
		Current	0.00 A	<input type="text"/>	<input type="text"/>	

■ Threshold Settings

These fields are used to set the maximum, minimum, and fluctuation threshold settings for the Aggregate Current, Voltage, Power, and Power Dissipation. If any of them falls below the minimum setting or exceeds the maximum setting, an alarm is triggered.

■ On / Off / Reboot

You can manually turn the outlet on or off from this page by clicking the radio buttons. To reboot the outlet, enable the *Reboot* checkbox and click **Save** (located at the bottom of the page).

Configuration

The *Configuration* page is used to configure the settings of the eco PDU at the bank and individual power outlet level:

POP Setting

Enable POP Mode (Proactive Overload Protection)

POP Threshold :

Same as Bank Max Current 19 A

User Define

Bank Configuration

Bank	Bank Name
[01]	
[02]	

Outlet Configuration

Outlet	Outlet Name	Confirmation Required	Delay Time (sec)		Remote Turn ON Method
			Power ON	Power OFF	
[01]	<input type="text"/>	<input type="checkbox"/>	<input type="text" value="0"/>	<input type="text" value="15"/>	Method: Kill the Power <input type="text"/> MAC Address: <input type="text"/>
[02]	<input type="text"/>	<input type="checkbox"/>	<input type="text" value="0"/>	<input type="text" value="15"/>	Method: Kill the Power <input type="text"/> MAC Address: <input type="text"/>
[03]	<input type="text"/>	<input type="checkbox"/>	<input type="text" value="0"/>	<input type="text" value="15"/>	Method: Kill the Power <input type="text"/> MAC Address: <input type="text"/>
[04]	<input type="text"/>	<input type="checkbox"/>	<input type="text" value="0"/>	<input type="text" value="15"/>	Method: Kill the Power <input type="text"/> MAC Address: <input type="text"/>
[05]	<input type="text"/>	<input type="checkbox"/>	<input type="text" value="0"/>	<input type="text" value="15"/>	Method: Kill the Power <input type="text"/> MAC Address: <input type="text"/>
[06]	<input type="text"/>	<input type="checkbox"/>	<input type="text" value="0"/>	<input type="text" value="15"/>	Method: Kill the Power <input type="text"/> MAC Address: <input type="text"/>

POP Setting

This section allows you to configure the settings for ATEN's exclusive Proactive Overload Protection (POP) technology. Effective on all non-critical outlets, this added safety feature automatically powers off when a current overload occurs.

- ◆ **Enable POP Mode** by clicking the radio button
- ◆ Make your selection for the *POP Threshold* options are *Same as Bank Maximum Current* or *User Defined* — Enter a value in the field.

Note: This feature is available on PE8216/8324 models only. See *Proactive Overload Protection (POP)*, page 6, for more details.

Bank Configuration

Each bank can be given a distinctive name. The maximum number of characters is 15.

Outlet Configuration

This page lets you set up the power management configuration for the selected outlet. The meanings of the field headings are described in the following table

Heading	Meaning
Outlet Name	Each outlet can be given a distinctive name. The maximum number of characters is 15.
Confirmation Required	When enabled (checked), users are prompted to confirm every power operation before it is performed. When disabled (unchecked), power operations are performed without confirmation.
Power ON Delay	Sets the amount of time the eco PDU shall wait for after the Power Button is clicked (see <i>Bank Status</i> , page 33), before it powers on the outlet. Note: The default delay time is 0 seconds; the maximum is 999 seconds. When a series of outlets are scheduled to be powered up, they turn on in sequence with a default delay of 10 milliseconds between each outlet.
Power OFF Delay	Sets the amount of time the eco PDU shall wait for after the Power Button is clicked (see <i>Bank Status</i> , page 33), before it turns off the outlet's power. For the <i>System after AC Back</i> option (see below), after the delay time expires, the eco PDU waits for another fifteen seconds, then shuts down the computer. The default delay time is 15 sec; the maximum delay time is 999 sec.
Remote Turn ON Method	Use the drop-down menu to select one of the following: Wake on LAN This is a safe shutdown and restart option. If selected, when an Outlet is turned Off, the eco PDU first sends a message to the computer telling it to prepare for a shutdown; it then waits for the amount of time set by the <i>Power Off Delay</i> field to give the OS time to shut down before the computer is powered down to standby mode. Likewise, when the Outlet is turned On, the eco PDU waits for the amount of time set by the <i>Power On Delay</i> field, then sends an Ethernet message to the computer connected to the Outlet, telling the computer to turn itself On. Note: For safe shutdown and restart, the computer must be running Windows (98 or higher), or Linux, with the <i>safe shutdown</i> program (available by download from our website), installed and running.

(Continues on next page)

Heading	Meaning
Remote Turn ON Method	<p>System after AC Back</p> <p>This is a safe shutdown and restart option. If selected, when an Outlet is turned Off, the eco PDU first sends a message to the computer telling it to prepare for shutdown; it then waits for the amount of time set by the <i>Power Off Delay</i> field to give the OS time to shut down before the computer is powered down.</p> <p>When the Outlet is turned On, the eco PDU waits for the amount of time set by the <i>Power On Delay</i> field, then sends power to the server. When the server receives power, it shall turn itself on.</p> <p>Note: For safe shutdown and restart, the computer must be running Windows (98 or higher), or Linux, with the <i>safe shutdown</i> program (available by download from our website), installed and running.</p> <p>Kill the Power</p> <p>If selected, the eco PDU waits for the amount of time set by the <i>Power Off Delay</i> field, and then turns the Outlet's power Off. A cold (non-safe) shutdown is performed.</p>
MAC Address	<p>In order to use either of the safe shutdown and restart methods, the MAC address of the computer connected to the outlet must be filled in here.</p>

When you have finished making your configuration settings, click **Save**.

This Page Intentionally Left Blank

Chapter 6

User Management

Overview

Selecting the *User* tab brings up the *Accounts* menu, with the *Administrator Information* and *User Information* displayed in the main panel:

Administrator information

Administrator:

Name: Password:

User information

Management	Name	Password	Outlet																							
			All	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Enable ▾	aaa	***																								
Enable ▾	222	***																								
Enable ▾	x	*																								
Enable ▾	gg	**																								
Enable ▾	678	***																								
Enable ▾	qwer	****																								
Enable ▾	1234	****																								
Enable ▾	uu	**																								

Note: There is a pre-installed administrator account. It can be used to set up the device and to begin creating users and groups. The username and password for this account is *administrator* and *password*. For security purposes, we strongly recommend changing these to something unique.

Administrator Information

This section is used to set the administrator username and password. Only administrators can view this section. For details, see *Changing the Administrator Login*, page 26.

User Information

To add a user, do the following:

1. Select the user type in the Management drop-down menu.
2. Key in a name and password in the Name and Password fields.
3. Set the outlet-by-outlet permissions of the user in the Outlet field.
4. Set the Management field to *Enable*.
5. Click *Save* to save your settings.

Note: Values must be entered in both the Name and Password fields in order to enable an account.

The available options are explained in the following table:

Field	Description
Management	The Management field allows you to Enable or Disable a user's account: <ul style="list-style-type: none"> ◆ Enable: Stores the user account ◆ Disable: Disables the user account
Name	From 1 to 16 characters are allowed.
Password	From 1 to 16 characters are allowed.
Outlet	This field allows you to set the outlet-by-outlet permissions of the user. Click on the user/port icon to cycle through the three permissions options, as follows:
	 User has complete access to this outlet.
	 User has read-only access to this outlet.
	 User has no access to this outlet.
Save	Click this button to save your operation or changes

Chapter 7

Log

Log

The eco PDU keeps a record of all transactions that take place on its installation, and stores up to 128 events at a any given time.

The screenshot displays the 'System Log' interface for the NRCoffice PE8324A PDU. The interface includes a navigation bar with icons for Energy, User, Log (selected), Setup, and PDU, along with an ATEN logo. A sidebar on the left shows a list of event IDs from [01] to [24]. The main area features a table of log entries with columns for No., Date/Time, Category, Severity, User, and Description. The table shows 17 events, including authentication attempts and device reboots. At the bottom of the table, there are navigation buttons: Clear, First Page, Previous Page, Next Page, Last Page, and Save. The footer indicates the copyright is 2012 ATEN International Co., Ltd.

No.	Date/Time	Category	Severity	User	Description
001	2012-11-19 13:28:30	Authentication	Information	administrator	administrator 10.3.41.101 logged in.
002	2012-11-19 13:06:33	Authentication	Information	administrator	administrator 10.3.41.101 logged out.
003	2012-11-19 13:03:22	Authentication	Information	administrator	administrator 10.3.41.101 logged in.
004	2012-11-19 12:50:25	Authentication	Information	administrator	administrator 10.3.41.141 session timed out.
005	2012-11-19 12:00:11	Authentication	Information	administrator	administrator 10.3.41.141 logged in.
006	2012-11-19 11:48:22	Device	Information		Device was rebooted.
007	2012-11-19 11:47:14	Device	Information		Device was rebooted.
008	2012-11-19 11:35:19	Authentication	Information	administrator	administrator 10.3.52.73 logged out.
009	2012-11-19 11:35:00	Authentication	Information	administrator	administrator 10.3.52.73 logged in.
010	2012-11-19 11:27:58	Authentication	Information	administrator	administrator 10.3.52.73 logged out.
011	2012-11-19 11:27:37	Authentication	Information	administrator	administrator 10.3.52.73 logged in.
012	2012-11-19 11:27:21	Device	Information		Device was rebooted.
013	2012-11-19 10:40:00	Authentication	Information	administrator	administrator 10.3.52.73 logged out.
014	2012-11-19 10:39:34	Authentication	Information	administrator	administrator 10.3.52.73 logged in.
015	2012-11-19 10:37:50	Device	Information		Device was rebooted.
016	2012-11-19 10:35:11	Device	Information		Device was rebooted.
017	2012-11-19 10:34:08	Device	Information		Device was rebooted.
018	2012-11-19 10:34:00	Device	Information		Device was rebooted.

The System Log Event List

- ◆ Clicking on a device in the Sidebar displays its log events in the main panel's log event list.
- ◆ Clicking the **Refresh** button updates the log list with the latest events.
- ◆ The entry box to the right of the Refresh button lets you set the number of events displayed per page.
- ◆ The top right of the main panel shows the total number of pages in the log file, and the number of the page you are currently viewing.
- ◆ The buttons in the bottom row function as follows:
 - ◆ **Clear:**
Click to erase the contents of the log event list
 - ◆ **First Page:**
Click to go to the first page of the log event list
 - ◆ **Previous Page:**
Click to move to the previous page of the log event list
 - ◆ **Next Page:**
Click to move to the next page of the log event list
 - ◆ **Last Page:**
Click to move to the last page of the log event list
 - ◆ **Export Log:**
Click to export and save the contents of the log event list as an exported file.

Chapter 8

Setup


Device Management

The *Setup* page allows administrators and users with device management permission to configure and control the overall eco PDU operations.

Device Configuration

This page presents information about the device selected, as described in the following sections:

General

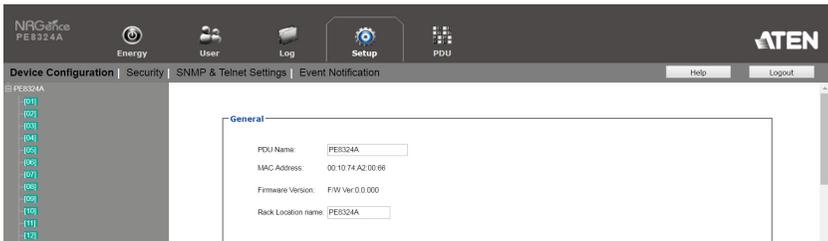


Item	Meaning
PDU Name	This field lets you rename the device as desired. Simply key in the name of your choice. Click Save (located at the bottom of the page) to save the new name.
MAC Address	This item displays the eco PDU's MAC address.
Firmware Version	This item displays the current firmware version. You can check if there are any newer versions available on the ATEN website.
Rack Location Name	This field lets you give the rack location a unique name for easy reference.

Service Ports

As a security measure, if a firewall is being used, the administrator can specify the port numbers that the firewall will allow. If a port other than the default is used, users must specify the port number as part of the IP address when logging in. If an invalid port number (or no port number) is specified, the eco PDU will not be found.

Select whether to allow only secure browser logins, as shown below:

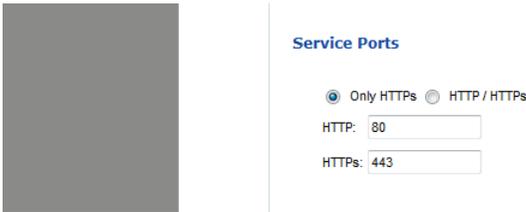

The screenshot shows a configuration window titled "Service Ports". It contains two radio buttons: "Only HTTPS" (which is selected) and "HTTP / HTTPS". Below the radio buttons, there are two input fields: "HTTP:" with the value "80" and "HTTPS:" with the value "443".

An explanation of the fields is given in the table below:

Field	Explanation
HTTP	The port number for a browser login. The default is 80.
HTTPS	The port number for a secure browser login. The default is 443.

- Note:**
1. Valid entries for all of the Service Ports are from 1 to 65535.
 2. The service ports cannot have the same value. You must set a different value for each.
 3. If there is no firewall (on an Intranet, for example), it doesn't matter what these numbers are set to, since they have no effect.

IPv4 Configuration

The PDU's IPv4 IP and DNS addresses (the traditional method of specifying IP addresses) can either be assigned automatically (DHCP), or manually, by specifying a fix IP address.

IPv4 Configuration

Obtain IP address automatically [DHCP]

Set IP address manually [Fixed IP]

IP Address:

Subnet Mask:

Default Gateway:

Obtain DNS server address automatically

Set DNS server address manually

Preferred DNS Server:

Alternate DNS Server:

- ◆ For dynamic IP address assignment, select the *Obtain IP address automatically* radio button. (This is the default setting.)
- ◆ To specify a fixed IP address, select the *Set IP address manually* radio button and fill in the IP address with values appropriate for your network.
- ◆ For automatic DNS Server address assignment, select the *Obtain DNS Server address automatically* radio button.
- ◆ To specify the DNS Server address manually, select the *Set DNS server address manually* radio button, and fill in the addresses for the Preferred and Alternate DNS servers with values appropriate for your network.

-
- Note:**
1. If you choose *Obtain IP address automatically*, when the device starts up, it shall wait for its assigned IP address from the DHCP server. If it hasn't obtained an IP address after one minute, it automatically reverts to its default IP address (192.168.0.60.)
 2. If the device is on a network that uses DHCP to assign network addresses, and you need to ascertain its IP address, see *IP Address Determination*, page 68.
 3. Specifying the Alternate DNS Server address is optional.
-

Event Notification

The Event Notification section is divided into three sections: SMTP Settings, SNMP Trap Receivers, and Syslog Server. Each section is described below.

Note: SMTP communications are supported on Port 25.

SMTP Settings

The screenshot shows a web interface for configuring SMTP settings. At the top, it says "Event Notification" in blue. Below that is the "SMTP Server" section. There are two checkboxes: "Enable report from the following SMTP Server" and "My server requires authentication". The first checkbox is unchecked. Below it are four text input fields: "SMTP Server:", "Account Name:", "Password:", and "From:". The second checkbox is also unchecked. Below it are two more text input fields: "To:" and another empty field.

To have the eco PDU device send e-mail reports from the SMTP server, do the following:

1. Check *Enable report from the following SMTP server*, and key in the IP address of your SMTP server.
2. If your server requires authentication, check the *My server requires authentication* checkbox.
3. Key in the appropriate account information in the *Account Name*, *Password*, and *From* fields.

Note: Only one email address is allowed in the *From* field, and it cannot exceed 64 characters.)

4. Key in the e-mail address(es) of where you want the event reports to be sent in the *To* field.

Note: If you are sending the report to more than one e-mail address, separate the addresses with a semicolon or comma, depending on the specified mail server. The total cannot exceed 256 characters.

SNMP Trap Receivers

SNMP Trap Receiver

Enable SNMP Trap SNMPv3 SNMPv2c SNMPv1

Receiver IP 1:

Service Port 1:

Community 1:

User name 1:

Auth-password 1:

Priv-Password 1:

Receiver IP 2:

Service Port 2:

Community 2:

User name 2:

Auth-password 2:

Priv-Password 2:

Up to four SNMP management stations can be specified. If you want to send out SNMP trap notifications, do the following:

1. Check *Enable SNMP Trap*.
2. Select which version of SNMP you want to use.
3. Key in the IP address(es) and the service port number(s) of the computer(s) to be notified by the SNMP trap events. The valid port range is 1–65535, with the default port value being 162.

Note: Make sure that the port number you specify here matches the port number used by the SNMP receiver computer.

4. Key in the community value(s) if required by the version of SNMP used.
5. Key in the auth/privacy password(s) that correspond to each of the stations.

Syslog Server

Syslog Server

Enable Syslog Server

Server IP:

Service Port:

To record all events that take place on the eco PDU devices, and write them to the eco PDU Syslog server, do the following:

1. Check **Enable Syslog Server**.

Key in the IP address and port number of the Syslog server. The valid port range is 1–65535. The default port value is 514.

Date/Time

The Date/Time dialog page sets the eco PDU's time parameters:

Date Time

Time Zone

(GMT+08:00) Beijing Chongqing Hong Kong Urumqi ▼

Daylight Savings Time

Manual Input

Date: (YYYY-MM-DD) 🇺🇸

Time: (HH:MM:SS)

Sync with PC

Network Time

Enable auto adjustment

AU | ntp1.cs.mu.OZ.AU ▼

Preferred custom server IP:

Alternate time server:

AU | ntp1.cs.mu.OZ.AU ▼

Alternate custom server IP:

Adjust time every days

[Adjust Time Now](#)

Set the parameters according to the information described below.

Time Zone

- ◆ To establish the time zone that the eco PDU is located in, use the *Time Zone* drop-down menu to choose the city that most closely corresponds to where it is at.
- ◆ If your country or region employs daylight saving time (summer time), check the corresponding checkbox.

Manual Input

Use this section to specify the eco PDU's date and time manually.

- ◆ Click the calendar icon and select a calendar entry for the date.
- ◆ Key the time into the *Time* field, using the HH:MM:SS (hours, minutes, seconds) format.

Note: This section is only enabled when *auto adjustment* (in the *Network Time* section) is disabled (unchecked).

As an alternative to specifying the date and time by entering them into the date and time fields, you can check the *Sync with PC* checkbox, where the eco PDU will take its date and time settings from the locally connected PC.

Network Time

To have the time automatically synchronized to a network time server, do the following:

1. Check the *Enable auto adjustment* checkbox.
2. Select your preferred time server, or check the *Preferred custom server IP* checkbox, and key in the IP address of the time server of your choice.
3. If you want to configure an alternate time server, check the *Alternate time server* checkbox, and repeat step 2 for the alternate time server entries.
4. Key in your choice for the number of days between synchronization procedures.

Finishing Up

When you have finished making your settings on this page, click **Save**.

After you have saved your changes, click **Adjust Time Now** to synchronize immediately according to the time settings.

Security

The Security page controls access to the eco PDU.

Security

Login Failures

Allowed:

Timeout: min

Working Mode

Enable ICMP

Login Failures

- ◆ **Allowed** sets the number of consecutive failed login attempts that are permitted from a remote user.
- ◆ **Timeout** sets the amount of time a remote user must wait before attempting to log in again after exceeding the number of allowed failures.

Working Mode

- ◆ If *ICMP* is **enabled**, the eco PDU device can be pinged. If it is not enabled, the device cannot be pinged. It is enabled by default.

Account Policy

The Account Policy section governs policies in regard to the login usernames and passwords.

Account Policy

Minimum Username Length :

Minimum Password Length :

Password Must Contain At Least :

One Upper Case

One Lower Case

One Number

Disable Duplicate Login

Check a policy and enter the required information in the appropriate fields.

Item	Description
Minimum Username Length	Sets the minimum number of characters required for a username. Acceptable values are from 1 to 16.
Minimum Password Length	Sets the minimum number of characters required for a password. Acceptable values are from 1 to 16.
Password Must Contain At Least	Checking any of these items requires users to include at least one of the specified items in their password. Note: This policy does not affect existing user accounts. Only new user accounts created after this policy has been enabled, and users required to change their passwords are affected.
Disable Duplicate Login	Check this to prevent users from logging in with the same account at the same time.

Login String / IP Filter / Mac Filter

Login String/IP Filter

Login String :

IP Filter Enable Include Exclude

MAC Filter Enable Include Exclude

■ Login String

The *Login String* entry field is used to specify a login string (in addition to the IP address) that users must include when accessing the eco PDU device with a browser. For example:

192.168.0.126/abcdefg

- ◆ The following characters are allowed:

0-9 a-z A-Z ~ ! @ \$ * () _ ' ,

- ◆ The following characters are not allowed:
& ^ { } ' ' < > | " % " : / ? # \ [Space] + - = [] ;
Compound characters (É Ç ñ ... etc.)

-
- Note:**
1. There must be a forward slash between the IP address and the string.
 2. If no login string is specified here, anyone will be able to access the eco PDU device login page using the IP address alone. This makes your installation less secure.
-

For security purposes, we recommend that you change this string occasionally.

■ IP Filter / MAC Filter

If any filters have been configured, they appear in the IP Filter and/or MAC Filter list boxes.

IP and MAC Filters control access to the eco PDU based on the IP and/or MAC addresses of the client computers attempting to connect. A maximum of 5 IP filters and 5 MAC filters are allowed.


To enable IP and/or MAC filtering, check the *IP Filter Enable* and/or *MAC Filter Enable* checkbox.

- ◆ If the include button is checked, all addresses within the filter range are allowed access, while all other addresses are denied access.
- ◆ If the exclude button is checked, all addresses within the filter range are denied access, while all other addresses are allowed access.

Adding Filters


To add an IP filter, do the following:

1. Click **Add**. A dialog box similar to the one below appears:

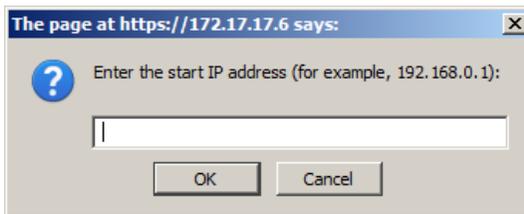

- Specify the filter address in the dialog box (for example, 192.168.0.200), then click **OK**.

A second dialog box, similar to the one below, appears:

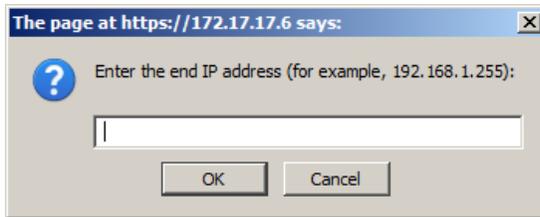


- To filter a single IP address, key in the same address as the start IP. To filter a continuous range of addresses, key in the end number of the range (for example, 192.168.0.225).

- After filling in the address, click **OK**.

Repeat these steps for any additional IP address ranges you want to filter.

To add a MAC filter, do the following:

- Click **Add**. A dialog box similar to the one below appears:

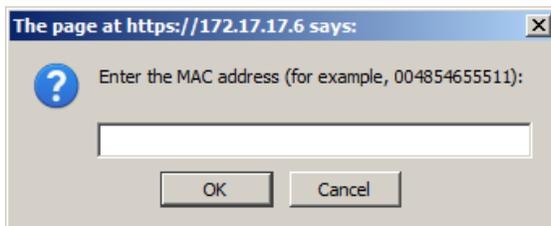

- Specify the MAC address in the dialog box (for example, 001074670000), then click **OK**.

Repeat these steps for any additional MAC addresses you want to filter.

IP Filter / MAC Filter Conflict

If there is a conflict between an IP and MAC filter — for example, where a computer's IP address is allowed by the IP filter but its MAC address is excluded by the MAC filter — then that computer's access is blocked.

In other words, if either filter blocks a computer, then the computer is blocked, no matter what the other filter is set to.

Modifying Filters

To modify a filter, select it in the IP Filter or MAC Filter list box and click **Modify**. The Modify dialog box is similar to the Add dialog box. When it comes up, simply delete the old address(es) and replace it with the new one(s).

Deleting Filters

To delete a filter, select it in the IP Filter or MAC Filter list box and click **Delete**.

Authentication & Authorization

The Authentication & Authorization field is used to set up login authentication and authorization management from external sources.

Authentication & Authorization

RADIUS Settings

<input type="checkbox"/> Enable RADIUS	
Preferred RADIUS Server IP :	<input type="text" value="0.0.0.0"/>
Preferred RADIUS Service Port :	<input type="text" value="0"/>
Alternate RADIUS Server IP :	<input type="text" value="0.0.0.0"/>
Alternate RADIUS Server Port :	<input type="text" value="0"/>
Timeout :	<input type="text" value="0"/> sec
Retries :	<input type="text" value="0"/>
Shared Secret (at least 6 characters) :	<input type="text"/>

■ RADIUS Settings

To allow authentication and authorization for the eco PDU device through a RADIUS server, do the following:

1. Check **Enable**.
2. Fill in the IP addresses and service port numbers for the Preferred and Alternate RADIUS servers. The default port number for the Preferred server is 1812; the default port number for the Alternate server is 1645.

Note: Make sure that the port numbers you specify here match the port numbers used by the RADIUS servers.

3. In the *Timeout* field, set the time in seconds that the eco PDU device shall wait for the RADIUS server to reply before it times out.
4. In the *Retries* field, set the number of allowed retries for attempting to connect to the RADIUS server.
5. In the *Shared Secret* field, key in the character string that you want to use for authentication between the eco PDU device and the RADIUS Server.
6. On the RADIUS server, set the entry for each user as follows:

su/xxxx

Where *xxxx* represents the username given to the user when the account was created on the eco PDU device. The user's access rights equivalent to the ones assigned for the eco PDU device. (See *Device Management*, page 43.)

Note: su/user supports view ports only; su/administrator supports all eco PDU functions.

Private Certificate

When logging in over a secure (SSL) connection, a signed certificate is used to verify that the user is logging in to the intended site. For enhanced security, the *Private Certificate* section allows you to use your own private encryption key and signed certificate, rather than the default ATEN certificate.

There are two methods for establishing your private certificate: generating a self-signed certificate or importing a third-party certificate authority (CA) signed certificate.

■ Generating a Self-Signed Certificate

If you wish to create your own self-signed certificate, a free utility — openssl.exe — is available for download over the web.

■ Obtaining a CA Signed SSL Server Certificate

For better ensured security, we recommend using a third-party certificate authority (CA) signed certificate. To obtain a third-party signed certificate, go to a CA (Certificate Authority) website to apply for an SSL certificate. After the CA sends you the certificate and private encryption key, save them to a convenient location on your computer.

■ Importing the Private Certificate

To import the private certificate, do the following:

1. Click **Browse** to the right of *Private Key* to locate the location path of the private encryption key file, and select it.
2. Click **Browse** to the right of *Certificate* to locate the location path of the certificate file, and select it.
3. Click **Upload** to complete the procedure.

Note: 1. Clicking **Restore Default** returns the device to using the default ATEN certificate.

2. Both the private encryption key and the signed certificate must be imported at the same time.
-

When you have finished making your settings on this page, click **Save**.

SNMP & Telnet Settings

You can manage the access control of SNMP agent for SNMP manager to query.



The screenshot shows the 'SNMP & Telnet Settings' configuration page. It is divided into two main sections: 'SNMP' and 'Telnet'.

SNMP Section:

- There are three radio buttons for enabling the SNMP agent: 'Enable' (selected), 'Read Only', and 'Disable'.
- Under 'SNMPv3 account information', there are four text input fields: 'Name' (containing 'administrator'), 'Auth-password' (masked with dots), 'Priv-Password' (masked with dots), and 'Read community' (containing 'administrator').
- Under 'SNMPv1/v2c community', there are two text input fields: 'Read community' (containing 'administrator') and 'Write community' (containing 'administrator').

Telnet Section:

- There is a checked checkbox labeled 'Enable Telnet Server'.
- Below it are two text input fields: 'Name' (containing 'telnet') and 'Password' (masked with dots).

SNMP

You can configure the read/write permission of SNMP interface.

Check to **Enable/Read Only/Disable**.

Where required, change the fields of *SNMPv3 account information* and *SNMP v1/v2c community*.

Telnet

Check to enable Telnet Server.

Use the *Name* and *Password* fields to change the account used to login via Telnet sessions.

Click Save to save the settings.

This Page Intentionally Left Blank

PDU

The *PDU* function is used to upgrade the eco PDU's firmware, and to backup and restore the device's configuration settings.

Firmware File

Clicking the **PDU** tab brings up the *Upgrade Main Firmware* menu page, which looks similar to the one below:

Firmware File

Check Main Firmware Version

Energy Box Name	F/W Version
PE6216G	FW Ver:1.0.062

Filename:

Backup

Password:

Restore

Filename:

Password:

A description of the items shown in this panel are given in the table below:

Item	Description
Check Main Firmware Version	If you enable <i>Check Main Firmware Version</i> , the eco PDU's current firmware compared with that of the upgrade file. If the current version is equal to or higher than the upgrade version, a popup message appears, to inform you of the situation and stops the upgrade procedure.
Name	Lists all of the eco PDU devices. Check the checkboxes of the devices for which you want to upgrade.
F/W Version	Displays the eco PDU's current firmware version.
Filename	As new versions of the firmware become available, they are posted onto our website for users to download. Click the <i>Browse</i> button to select the downloaded upgrade file.
Upgrade	Click this button to upgrade the firmware of the selected devices.

Upgrading the Firmware

To upgrade the firmware, refer to the UI snapshot on the preceding page, and do the following:

1. Go to our website and download the firmware upgrade file to a convenient location on your computer.
2. Click the *Browse* button to locate and select the downloaded firmware upgrade file.
3. Click **Upgrade** to start the upgrade procedure.
 - ◆ If you enabled *Check Main Firmware Version*, the current firmware is compared with that of the upgrade file. If the current version is equal to or higher than the upgrade version, a popup message appears, to inform you of the situation and stops the upgrade procedure.
 - ◆ If you didn't enable *Check Main Firmware Version*, the upgrade file is installed without comparing.
 - ◆ Once the upgrade completes successfully, the switch restarts automatically.
4. Log in again, and check the firmware version to be sure it is the new one.

■ Firmware Upgrade Recovery

Should the eco PDU's firmware upgrade procedure fail, and the device becomes unusable, the following firmware upgrade recovery procedure will resolve the problem:

1. Power off the device.
2. Press and hold the Reset Switch in (see page 10).
3. While holding the Reset Switch in, power the switch back on.

This causes the switch to use the original factory installed main firmware version. Once the switch is operational, you can try upgrading the firmware again.

Backup

To backup the device's settings, do the following:

1. In the *Password* field, key in a password for the setting file to be backed up.

Note: Entering a password is optional. If you do enter a password, make a note of it, since you will need it to be able to restore the file.

2. Click **Save**.
3. When the browser asks what you want to do with the file, select *Save to disk*; then save it in a convenient location.

Restore

To restore a previous backup, do the following:

1. Click **Browse**, navigate to the file and select it.

Note: If you have renamed the file, you can leave the new name as is. There is no need to return it to its original name.

2. In the *Password* field, key in the same password that you used to save the file.

Note: If you did not set a password when you created the backup file, you can omit this step.

3. Select as many of the options presented as you wish to restore.
4. Click **Restore**.

After the file is restored, a message appears to inform you that the procedure has completed successfully.

Safety Instructions

General

- ◆ This product is for indoor use only.
- ◆ Read all of these instructions. Save them for future reference.
- ◆ Follow all warnings and instructions marked on the device.
- ◆ Do not place the device on any unstable surface (cart, stand, table, etc.). If the device falls, serious damage will result.
- ◆ Do not use the device near water.
- ◆ Do not place the device near, or over, radiators or heat registers.
- ◆ The device cabinet is provided with slots and openings to allow for adequate ventilation. To ensure reliable operation, and to protect against overheating, these openings must never be blocked or covered.
- ◆ The device should never be placed on a soft surface (bed, sofa, rug, etc.) as this will block its ventilation openings. Likewise, the device should not be placed in a built in enclosure unless adequate ventilation has been provided.
- ◆ Never spill liquid of any kind on the device.
- ◆ Unplug the device from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- ◆ The device should be operated from the type of power source indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- ◆ To prevent damage to your installation it is important that all devices are properly grounded.
- ◆ The device is equipped with a 3-wire grounding type plug. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not attempt to defeat the purpose of the grounding-type plug. Always follow your local/national wiring codes.
- ◆ The equipment should be installed near the wall socket outlet and the disconnect device (appliance coupler on detachable power supply cord or plug on non-detachable power supply cord) should be readily accessible.

- ◆ Do not allow anything to rest on the power cord or cables. Route the power cord and cables so that they cannot be stepped on or tripped over.
- ◆ To help protect your system from sudden, transient increases and decreases in electrical power, use a surge suppressor, line conditioner, or uninterruptible power supply (UPS).
- ◆ Position system cables and power cables carefully; Be sure that nothing rests on any cables.
- ◆ When connecting or disconnecting power to hot pluggable power supplies, observe the following guidelines:
 - ◆ Install the power supply before connecting the power cable to the power supply.
 - ◆ Unplug the power cable before removing the power supply.
 - ◆ If the system has multiple sources of power, disconnect power from the system by unplugging all power cables from the power supplies.
- ◆ Never push objects of any kind into or through cabinet slots. They may touch dangerous voltage points or short out parts resulting in a risk of fire or electrical shock.
- ◆ Do not attempt to service the device yourself. Refer all servicing to qualified service personnel.
- ◆ If the following conditions occur, unplug the device from the wall outlet and bring it to qualified service personnel for repair.
 - ◆ The power cord or plug has become damaged or frayed.
 - ◆ Liquid has been spilled into the device.
 - ◆ The device has been exposed to rain or water.
 - ◆ The device has been dropped, or the cabinet has been damaged.
 - ◆ The device exhibits a distinct change in performance, indicating a need for service.
 - ◆ The device does not operate normally when the operating instructions are followed.
- ◆ Only adjust those controls that are covered in the operating instructions. Improper adjustment of other controls may result in damage that will require extensive work by a qualified technician to repair.
- ◆ Do not connect the RJ-11 connector marked "Sensor" to a public telecommunication network.

Rack Mounting

- ◆ Before working on the rack, make sure that the stabilizers are secured to the rack, extended to the floor, and that the full weight of the rack rests on the floor. Install front and side stabilizers on a single rack or front stabilizers for joined multiple racks before working on the rack.
- ◆ Always load the rack from the bottom up, and load the heaviest item in the rack first.
- ◆ Make sure that the rack is level and stable before extending a device from the rack.
- ◆ Use caution when pressing the device rail release latches and sliding a device into or out of a rack; the slide rails can pinch your fingers.
- ◆ After a device is inserted into the rack, carefully extend the rail into a locking position, and then slide the device into the rack.
- ◆ Do not overload the AC supply branch circuit that provides power to the rack. The total rack load should not exceed 80 percent of the branch circuit rating.
- ◆ Make sure that all equipment used on the rack – including power strips and other electrical connectors – is properly grounded.
- ◆ Ensure that proper airflow is provided to devices in the rack.
- ◆ Ensure that the operating ambient temperature of the rack environment does not exceed the maximum ambient temperature specified for the equipment by the manufacturer
- ◆ Do not step on or stand on any device when servicing other devices in a rack.

The eco PDU's Main Power Cord

Use the power cord supplied with this package. If it becomes necessary to replace the cord supplied with this package, be sure to use a cord of at least the same standard as the one provided.



Securing the Power Cables

To secure the cables in the eco PDU's power outlets, use only the ATEN Lock-Your-Plug cable holders that have been specifically designed to work with the eco PDU. Using any other kind of cable securing device could be highly dangerous. Please contact your ATEN dealer for information about ATEN Lock-Your-Plugs.

Resetting the Circuit Breaker

Before switching the circuit breaker to reset a trip, power down and disconnect all devices connected to the eco PDU's power outlets to prevent damage caused by a sudden power surge. If a power surge causes the eco PDU's circuit breaker to switch off the power and it needs to be reset, follow the instructions below.

Recovery Procedure:

1. Safely power down and disconnect all devices connected to the eco PDU's power outlets.
2. Switch off the circuit breaker for the source that is providing power to the eco PDU.
3. Switch the eco PDU's circuit breaker to reset the trip.
4. Switch on the circuit breaker for the source that is providing power to the eco PDU.
5. Reconnect the devices to the eco PDU's power outlets, and power them on.

Technical Support

International

- ◆ For online technical support – including troubleshooting, documentation, and software updates: <http://eservice.aten.com>
- ◆ For telephone support, see *Telephone Support* on page vi.

North America

Email Support		support@aten-usa.com
Online Technical Support	Troubleshooting Documentation Software Updates	http://www.aten-usa.com/support
Telephone Support		1-888-999-ATEN ext 4988

When you contact us, please have the following information ready beforehand:

- ◆ Product model number, serial number, and date of purchase.
- ◆ Your computer configuration, including operating system, revision level, expansion cards, and software.
- ◆ Any error messages displayed at the time the error occurred.
- ◆ The sequence of operations that led up to the error.
- ◆ Any other information you feel may be of help.


IP Address Determination

If you are an administrator logging in for the first time, you need to access the eco PDU in order to give it an IP address that users can connect to. There are two methods to choose from. In each case, your client computer must be on the same network segment as the eco PDU. After you have connected and logged in, you can give the device a fixed network address. (See *Device Management*, page 43.)

Method 1:

For computers running Windows, an IP address can be determined and/or assigned with the IP Installer utility which can be obtained from the *Download* area of our website. Look under *Driver/SW*, and the model of your device. After downloading the utility to your computer, do the following:

1. Unzip the contents of *IPInstaller.zip* to a directory on your hard drive.
2. Go to the directory that you unzipped the IPInstaller program to and run *IPInstaller.exe*. A dialog box similar to the one below appears:

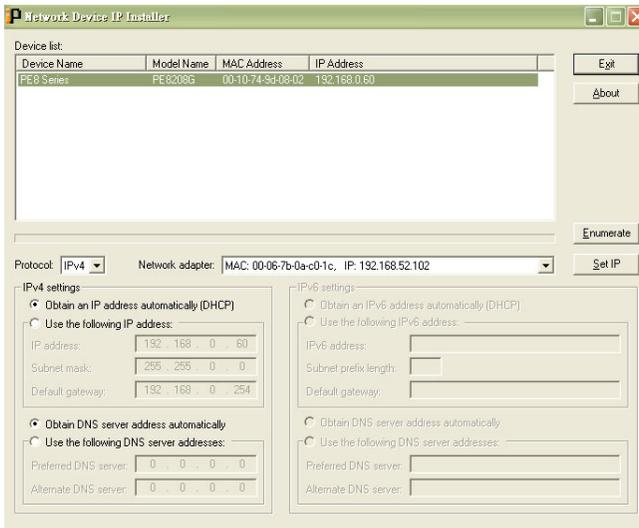

3. Select the device from the *Device List*.

Note: 1. If the list is empty, or your device doesn't appear, click **Enumerate** to refresh the Device List.

2. If there is more than one device in the list, use the MAC address to pick the one you want. The eco PDU's MAC address is located on its bottom panel.
-

4. Select either *Obtain an IP address automatically (DHCP)*, or *Specify an IP address*. If you chose the latter, fill the IP Address, Subnet Mask, and Gateway fields with the information appropriate to your network.
5. Click **Set IP**.
6. After the IP address shows up in the Device List, click **Exit** to end the program.

Method 2:

1. Set your computer's IP address to 192.168.0.XXX
Where XXX represents any number or numbers except 60 (192.168.0.60 is the default address of the eco PDU).
2. Specify the device's default IP address (192.168.0.60) in your browser to access it.
3. Assign a fixed IP address for the device (see *IPv4 Configuration*, page 45), that is suitable for the network segment that it resides on.
4. After you log out, reset your computer's IP address to its original value.
5. Once you have logged in, go to Network Settings to set up the permanent IP environment (see *IPv4 Configuration*, page 45).

Method 3:

ATEN eco DC allows you to determine/assign an IP address in order to configure a PDU device and monitor power status of the equipment connected to it. ATEN eco DC can be obtained from the Support and Downloads tab of the ATEN website.

Specifications

There are 10 models in the PE7xxx / PE8xxx range. They are available in 16- and 24-port versions, with power inlet/cord variations. A basic comparison is shown in the table below.

Basic Comparison

Model	Inlet / Cord	Outlets		Metering Level	Outlet Switching	
PE7216B	NEMA 6-20P	16	14 x IEC 60320 C13 + 2 x IEC 60320 C19	PDU / 1 x Bank / Outlet	No	
PE8216B					Yes 16/16	
PE7216G	IEC 60320 C20				No	
PE8216G					Yes 16/16	
PE7324B / J	NEMA L6-30P	24	21 x IEC 60320 C13 + 3 x IEC 60320 C19	PDU / 2 x Bank / Outlet	No	
PE8324B / J					Yes 24/24	
PE7324G	IEC 60309 32A				No	
PE8324G					Yes 24/24	
PE8324G2						6 x IEC 60320 C13 + 18 x IEC 60320 C19
PE8324G3						18 x IEC 60320 C13 + 6 x IEC 60320 C19

Note: The J models are identical to their B model counterparts but have power cords designed for the Japanese market.

PE7216B / PE8216B

Function			PE7216B	PE8216B
Power Outlets	Direct		16	
Connectors	Power Inlet		1 x NEMA 6-20P	
	Power Outlets	NEMA	NA	
		IEC	Total: 14 x IEC 60320 C13 + 2 x IEC 60320 C19 Bank 1-1, Outlet 1-8: 7 x C13 + 1 x C19. Bank 1-2, Outlet 9-16: 7 x C13 + 1 x C19	
	Environment Sensors		4 x RJ-11 Female (Black)	
	Door Sensor		1 x 4-pin Dry Contact	
	LAN		1 x RJ-45 Female (Silver) + LEDs (Orange/Green)	
LEDs	Outlet Status		NA	16 (Orange)
	PDU / Bank / Outlet		2-digit 7-segment (Orange)	
	PDU / Bank / Outlet		3 (Green)	
	Current / Volt / P.D. / Sensor1-Sensor4 / FW Upgrade		3-digit 7-segment (Orange)	
	Current / Volt / P.D. / IP / Sensor1-Sensor4		7 (Green)	
	Door Open		1 (Red)	
	IP		1 (Green)	
	Power		1 (Blue)	
Switches	LED Display Select		1 x Pushbutton	
	PDU / Bank / Outlet Select		2 x Pushbutton	
	Reset		1 x Semi-recessed Pushbutton	
	Power		1 x 16 A Branch Breaker	
Nominal Input Power			100-240 V~; 50-60 Hz; 16 A (UL), 20 A (Max.)	
Power Capacity			4.16kW	
Nominal Output Power	Per Port	IEC 60320 C19	100-240 V~; 50-60 Hz; 16 A (UL), 20 A (Max.)	
		IEC 60320 C13	100-240 V~; 50-60 Hz; 12 A (UL), 15 A (Max.)	
	Total		100-240 V~; 50-60 Hz; 16 A (UL), 20 A (Max.)	

Environment	Operating Temperature	0–50 °C
	Storage Temperature	-20–60 °C
	Humidity	0–80% RH Non-condensing
Physical Properties	Housing	Metal
	Weight	3.80 kg
	Dimensions (L x W x H)	132.48 x 6.60 x 4.40 cm

PE7216G / PE8216G

Function		PE7216G	PE8216G	
Power Outlets	Direct	16		
Connectors	Power Inlet	1 x IEC 60320 C20		
	Power Outlets	NEMA	NA	
		IEC	Total: 14 x IEC 60320 C13 + 2 x IEC 60320 C19 Bank 1-1, Outlet 1-8: 7 x C13 + 1 x C19. Bank 1-2, Outlet 9-16: 7 x C13 + 1 x C19	
	Environment Sensors		4 x RJ-11 Female (Black)	
	Door Sensor		1 x 4-pin Dry Contact	
	LAN		1 x RJ-45 Female (Silver) + LEDs (Orange/Green)	
LEDs	Outlet Status	NA	16 (Orange)	
	PDU / Bank / Outlet		2-digit 7-segment (Orange)	
	PDU / Bank / Outlet		3 (Green)	
	Current / Volt / P.D. / Sensor1-Sensor4 / FW Upgrade		3-digit 7-segment (Orange)	
	Current / Volt / P.D. / IP / Sensor1-Sensor4		7 (Green)	
	Door Open		1 (Red)	
	IP		1 (Green)	
	Power		1 (Blue)	
Switches	LED Display Select	1 x Pushbutton		
	PDU / Bank / Outlet Select	2 x Pushbutton		
	Reset	1 x Semi-recessed Pushbutton		
	Power	1 x Non-fuse Breaker		
Nominal Input Power		100-240 V~; 50-60 Hz; 16 A		
Power Capacity		4.60kW		
Nominal Output Power	Per Port	IEC 60320 C19	100-240 V~; 50-60 Hz; 15 A (TUV), 16 A (Max.)	
		IEC 60320 C13	100-240 V~; 50-60 Hz; 10 A	
	Total	100-240 V~; 50-60 Hz; 15 A (TUV), 16 A (Max.)		

Environment	Operating Temperature	0–40 °C
	Storage Temperature	-20–60 °C
	Humidity	0–80% RH Non-condensing
Physical Properties	Housing	Metal
	Weight	3.8 kg
	Dimensions (L x W x H)	132.48 x 6.60 x 4.40 cm

PE7324B/J / PE8324B/J

Function		PE7324B / J	PE8324B / J
Power Outlets	Direct	24	
Connectors	Power Cord	1 x NEMA L6-30P	
	Power Outlets	IEC	Total: 21 x IEC 60320 C13 + 3 x IEC 60320 C19 Bank 1-1, Outlet 1–8: 7 x C13 + 1 x C19. Bank 1-2, Outlet 9–16: 7 x C13 + 1 x C19 Bank 2, Outlet 17–24: 7 x C13 + 1 x C19
	Environment Sensors	4 x RJ-11 Female (Black)	
	Door Sensor	1 x 4-pin Dry Contact	
	LAN	1 x RJ-45 Female (Silver) + LEDs (Orange/Green)	
	LEDs	Outlet Status	NA
PDU / Bank / Outlet		2-digit 7-segment (Orange)	
PDU / Bank / Outlet		3 (Green)	
Current / Volt / P.D. / Sensor1–Sensor4 / FW Upgrade		3-digit 7-segment (Orange)	
Current / Volt / P.D. / IP / Sensor1–Sensor4		7 (Green)	
Door Open		1 (Red)	
IP		1 (Green)	
Power		1 (Blue)	
Switches	LED Display Select	1 x Pushbutton	
	PDU / Bank / Outlet Select	2 x Pushbutton	
	Reset	1 x Semi-recessed Pushbutton	
	Power	2 x Branch Breaker	
Nominal Input Power		100–240 V~; 50–60 Hz; 24 A (UL), 30 A (Max.)	
Nominal Input/Output Voltage		200–240 VAC	
Power Capacity		6.24 kW	

Nominal Output Power	Per Port	IEC 60320 C19	100–240 V~; 50–60 Hz; 12 A (UL), 15 A (Max.)
		IEC 60320 C13	100–240 V~; 50–60 Hz; 12 A (UL), 15 A (Max.)
	Total		100–240 V~; 50–60 Hz; 24 A (UL), 30 A (Max.)
Environment	Operating Temperature		0–50 °C
	Storage Temperature		-20–60 °C
	Humidity		0–80% RH Non-condensing
Physical Properties	Housing		Metal
	Weight		6.5 kg
	Dimensions (L x W x H)		177.50 x 6.60 x 4.40 cm

PE7324G / PE8324G

Function		PE7324G	PE8324G
Power Outlets	Direct	24	
Connectors	Power Cord	1 x IEC 60309 32 A	
	Power Outlets	IEC	Total: 21 x IEC 60320 C13 + 3 x IEC 60320 C19 Bank 1-1, Outlet 1–8: 7 x C13 + 1 x C19. Bank 1-2, Outlet 9–16: 7 x C13 + 1 x C19 Bank 2, Outlet 17–24: 7 x C13 + 1 x C19
	Environment Sensors	4 x RJ-11 Female (Black)	
	Door Sensor	1 x 4-pin Dry Contact	
	LAN	1 x RJ-45 Female (Silver) + LEDs (Orange/Green)	
LEDs	Outlet Status	NA	24 (Orange)
	PDU / Bank / Outlet	2-digit 7-segment (Orange)	
	PDU / Bank / Outlet	3 (Green)	
	Current / Volt / P.D. / Sensor1–Sensor4 / FW Upgrade	3-digit 7-segment (Orange)	
	Current / Volt / P.D. / IP / Sensor1–Sensor4	7 (Green)	
	Door Open	1 (Red)	
	IP	1 (Green)	
	Power	1 (Blue)	
Switches	LED Display Select	1 x Pushbutton	
	PDU / Bank / Outlet Select	2 x Pushbutton	
	Reset	1 x Semi-recessed Pushbutton	
	Power	2 x Non-fuse Breaker	
Nominal Input Power		100–240 V~; 50–60 Hz; 32 A	
Nominal Input/Output Voltage		200–240 VAC	
Power Capacity		7.36 kW	
Nominal Output Power	Per Port	IEC 60320 C19	100–240 V~; 50–60 Hz; 15 A (TUV), 16 A (Max.)
		IEC 60320 C13	100–240 V~; 50–60 Hz; 10 A
	Total	100–240 V~; 50–60 Hz; 30 A (TUV), 32 A (Max.)	

Environment	Operating Temperature	0–40 °C
	Storage Temperature	-20–60 °C
	Humidity	0–80% RH Non-condensing
Physical Properties	Housing	Metal
	Weight	6.5 kg
	Dimensions (L x W x H)	177.50 x 6.60 x 4.40 cm

PE8324G2 / PE8324G3


Function		PE8324G2	PE8324G3	
Power Outlets	Direct	24		
Connectors	Power Cord	1 x IEC 60309 32 A		
	Power Outlets	IEC	Total: 6 x IEC 60320 C13 + 18 x IEC 60320 C19 Bank 1-1, Outlet 1-8: 2 x C13 + 6 x C19. Bank 1-2, Outlet 9-16: 2 x C13 + 6 x C19 Bank 2, Outlet 17-24: 2 x C13 + 6 x C19	Total: 18 x IEC 60320 C13 + 6 x IEC 60320 C19 Bank 1-1, Outlet 1-8: 6 x C13 + 2 x C19. Bank 1-2, Outlet 9-16: 6 x C13 + 2 x C19 Bank 2, Outlet 17-24: 6 x C13 + 2 x C19
	Environment Sensors		4 x RJ-11 Female (Black)	
	Door Sensor		1 x 4-pin Dry Contact	
	LAN		1 x RJ-45 Female (Silver) + LEDs (Orange/Green)	
LEDs	Outlet Status	24 (Orange)		
	PDU / Bank / Outlet	2-digit 7-segment (Orange)		
	PDU / Bank / Outlet	2 (Green)		
	Current / Volt / P.D. / Sensor1-Sensor4 / FW Upgrade	3-digit 7-segment (Orange)		
	Current / Volt / P.D. / IP / Sensor1-Sensor4	7 (Green)		
	Door Open	1 (Red)		
	IP	1 (Green)		
	Power	1 (Blue)		
Switches	LED Display Select	1 x Pushbutton		
	PDU / Bank / Outlet Select	2 x Pushbutton		
	Reset	1 x Semi-recessed Pushbutton		
	Power	2 x Non-fuse Breaker		
Nominal Input Power		100 – 240 V; 50 – 60 Hz; 32 A		
Nominal Input/Output Voltage		100 – 240 V AC		

Power Capacity		7.36 kW	
Nominal Output Power	Per Port	IEC 60320 C19	100 – 240 V~; 50 – 60 Hz; 15 A (TUV), 16 A (Max.)
		IEC 60320 C13	100 – 240 V~; 50 – 60 Hz; 10 A (Max.)
	Total		100 – 240 V~; 50 – 60 Hz; 30 A (TUV), 32 A (Max.)
Environment	Operating Temperature	0 – 40 °C	
	Storage Temperature	-20 – 60 °C	
	Humidity	0–80% RH Non-condensing	
Physical Properties	Housing	Metal	
	Weight	6.5 kg	
	Dimensions (L x W x H)	177.5 x 6.60 x 4.40 cm	

Administrator Login Failure

If you are unable to perform an administrator login (because the username and password information has become corrupted, or you have forgotten it, for example), you can clear the login information with the following procedure:

1. Power off the eco PDU and remove its housing.
2. Short the jumper labeled J1 (PIN5 and PIN6).

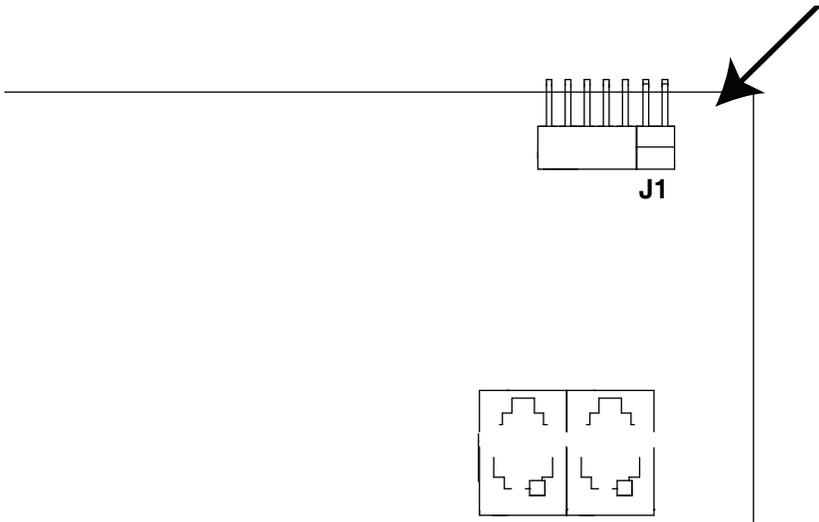

3. Power on the eco PDU.
4. After the beep indicates successfully powered on, power off the switch.
5. Remove the jumper cap from J1.
6. Close the housing and start the eco PDU.
After you start, you can use the default username and password to log in.

ATEN Warranty Policy

The warranty policy may vary by product category and region of purchase. For details, please visit ATEN's official website, select your purchase countries/ regions and then go to the Support Center, or contact your local ATEN sales representative for further assistance.

Copyright © 2025 ATEN® International Co., Ltd.

Released: 2025-05-13

ATEN and the ATEN logo are registered trademarks of ATEN International Co., Ltd. All rights reserved. All other brand names and trademarks are the registered property of their respective owners.